

TOSHIBA

Leading Innovation >>>



19/22/26/32/42
SL738G

DIGITAL Series



Contents

Safety Precautions	3	Volume	28
Installation and important information	4	Balance, Bass, Treble	28
The remote control	6	Surround Sound.....	28
Inserting batteries and effective range of the remote	7	Stable Sound®	28
Connecting external equipment.....	8	Bass Boost.....	28
REGZA-LINK Connections.....	11	Bass Boost Level.....	28
Connecting an HDMI or DVI device to the HDMI input.....	13	Audio Description	28
To connect an HDMI device	13	Visually Impaired	29
To connect a DVI device.....	14	Advanced Audio Settings	29
Connecting a computer.....	16	Widescreen viewing	30
To connect a PC to the HDMI terminal..	16	Picture controls	32
Using the controls	18	Picture Mode	32
Switching on	19	Brightness, Contrast, Colour and Tint..	32
Using the remote control	19	Sharpness	32
Using the side-panel controls	19	Back Light Adjustment.....	32
Using the touch sensor.....	19	Colour Temperature.....	32
Tuning the television	20	Cinema Mode	33
Initial Setup	20	DNR	33
Setting the programmes	21	MPEG NR.....	34
Auto Scan	21	CTI.....	34
Update Scan	22	Adaptive Luma Control	34
Single RF Scan.....	22	Active Backlight.....	34
Favorite Network Select.....	22	Blue Screen	34
Analogue Manual Scan	23	3D Colour Management.....	34
Channel Skip	23	Base Colour Adjustment	35
Channel Sort	24	HDMI RGB Range.....	35
Channel Edit	24	H./V. Position	36
Channel Decode.....	25	ClearFrame	36
Analogue Channel Fine Tune	25	PC.....	36
Clean Channel List	25	Timer control.....	37
Common Interface	26	Time Zone	37
Reset TV	26	Country Region ID	37
Automatic Power Down.....	26	Time.....	37
General controls	27	Sleep Timer.....	38
Selecting programme positions	27	Input selection and AV connections	38
Time Display.....	27	Input selection	38
Stereo and Bilingual transmissions.....	27	Input signal selection	39
Quick Access Menu	27	REGZA-LINK Controls.....	40
Sound controls	28	Equipment Control.....	40
		Input Source Selection	40
		Pass-Through Control	41

REGZA-LINK Menus	41	Auto Install	52
One Touch Play	41	Manual OAD	52
System Standby	41	System Information	52
System Audio Control	41	Text services	53
PC Link	42	Setting the Language	53
Enable REGZA-LINK	42	Text Information	53
Auto Power On	42	Control Buttons	53
Auto Standby	42	Questions and Answers	54
Amplifier Control	42	Specifications and accessories	56
Speaker Preference	42	License Information used with Toshiba	
Media Player	43	Televisions	57
Enter Media Player	43	Exhibit A	58
Photo Multi-View	43	Exhibit B	58
Playing Photo Slideshow	44	Notes	60
Viewing Music Files	44		
Playing Music	44		
Preference control	45		
Analogue Subtitle	45		
Digital Subtitle	45		
Subtitle Type	45		
Audio Languages	45		
Audio Channel	45		
Auto Format	46		
4:3 Stretch	46		
Side Panel Adjustment	46		
Game Mode	46		
Parental control	46		
Channel Block	46		
Time Interval Lock	47		
Programme Block	48		
Input Block	48		
Panel Lock	50		
Factory Default	50		
Digital on-screen information and			
programme guide	50		
Information	50		
Guide	51		
EPG Timer	51		
Software upgrade and system			
information	51		
Auto Download	51		

Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

Air Circulation

Leave more than 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity. Place in a location where the temperature remains between 5°C (41°F) min. and 35°C (94°F) max.

Mains Supply

The mains supply required for this equipment is 220-240V ~, 50/60Hz. Never connect to a DC supply or any other power source. DO ensure that the television is not standing on the mains lead. Use only the supplied lead.

DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. In the UK, the fuse fitted in this plug is approved by ASTA or BSI to BS1362.

It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted.

IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

Do

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels on equipment.

DO NOT REMOVE ANY FIXED COVERS AS THIS WILL EXPOSE DANGEROUS AND 'LIVE' PARTS.

THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.

Do not

DO NOT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DO NOT allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

DO NOT place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DO NOT use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions.

DO NOT leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities.

DO NOT continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

WARNING – excessive sound pressure from earphones or headphones can cause hearing loss.

ABOVE ALL – NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.

NEVER guess or take chances with electrical equipment of any kind – it is better to be safe than sorry.

Installation and important information

Where to install

Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen.


Place the TV set on a stable, level surface that can support the weight of the TV.

For model 26/32/42SL738G: As an additional safety measure you can secure the TV to the level surface or a wall, as shown in the illustration, using a sturdy strap.

The LCD display panels are manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and that small items cannot be inserted into slots or openings in the case.

Wall mounting of the TV should only be performed by qualified servicing personnel. Use only with the wall mount bracket specified by the manufacturer.

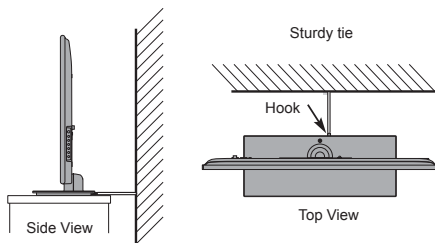

Please take note

EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:

- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product while in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;


Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

- The digital reception function of this television is only effective in the countries listed in the "Country" section of the "SETUP" menu. Depending on country/area, some of this television's functions may not be available. Reception of future additional or modified services can not be guaranteed with this television.
- If stationary images generated by 4:3 broadcasts, text services, channel identification logos, computer displays, video games, on-screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.
- Very long, continuous use of the 4:3 picture on a 16:9 screen may result in some retention of the image at the 4:3 outlines, this is not a defect of the LCD TV and is not covered under the manufacturers warranty. Regular use of other size modes (eg: Superlive) and varying the "side panel" brightness (if available on the model) will prevent permanent retention.

SYMBOL	SYMBOL DEFINITION
	DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated "DANGEROUS VOLTAGE" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	INSTRUCTIONS: The exclamation point within an equilateral triangle to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.
	WARNING: To prevent the spread of fire, keep candles or other open flames away from this product at all times.

The remote control


Simple at-a-glance reference of your remote control.

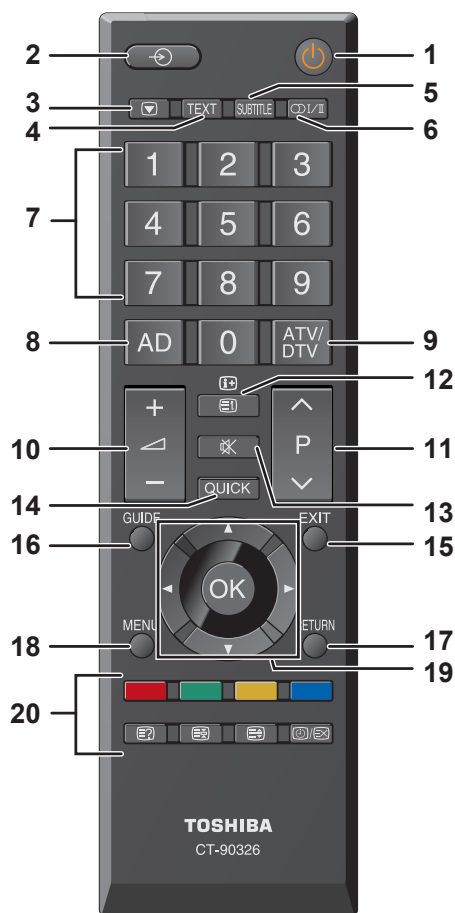

- 1 For On/Standby mode
- 2 To select input from external sources
- 3 Still Picture
- 4 To call up text services in analogue mode and interactive services in digital mode
- 5 To turn the subtitle On/Off
- 6 Stereo/Bilingual transmissions
- 7 Number buttons
- 8 Switch the Audio Description On/Off
- 9 To toggle between ATV and DTV mode
- 10 To alter the volume
- 11 To change programme
- 12 In TV mode: To display on-screen information
In Text mode: To access index page
- 13 To mute the sound
- 14 To display Quick access menu
- 15 To exit menus
- 16 To display the programme guide
- 17 To return to the previous level of the on-screen menu
- 18 To display the on-screen menu
- 19 ▲, ▼, ◀, ▶: To move up, down, left or right in the on-screen menu
OK: To confirm the selection
- 20 Colour button: Text control buttons
 - ◻ To reveal concealed text
 - ◻ To hold a wanted page
 - ◻ To enlarge text display size
 - ◻ In normal picture mode: To display clock on TV screen
In Teletext mode: To toggle between Teletext and normal picture mode

Inserting batteries and effective range of the remote

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.

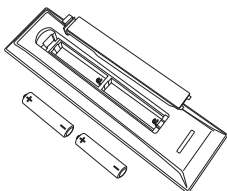


Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in accordance with instructions on page 60 of this manual. Warning: batteries must not be exposed to excessive heat such as sunshine, fire or the like.

The performance of the remote control will deteriorate beyond a distance of ten meters or outside an angle of 30 degrees from the center of the television. If the operating range becomes reduced the batteries may need replacing.


Connecting external equipment

Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket.


19/22SL738G:

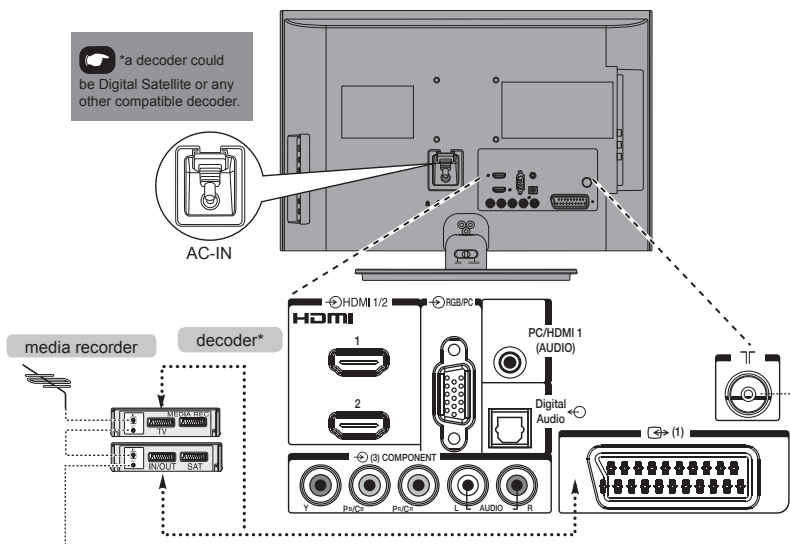

26/32SL738G:

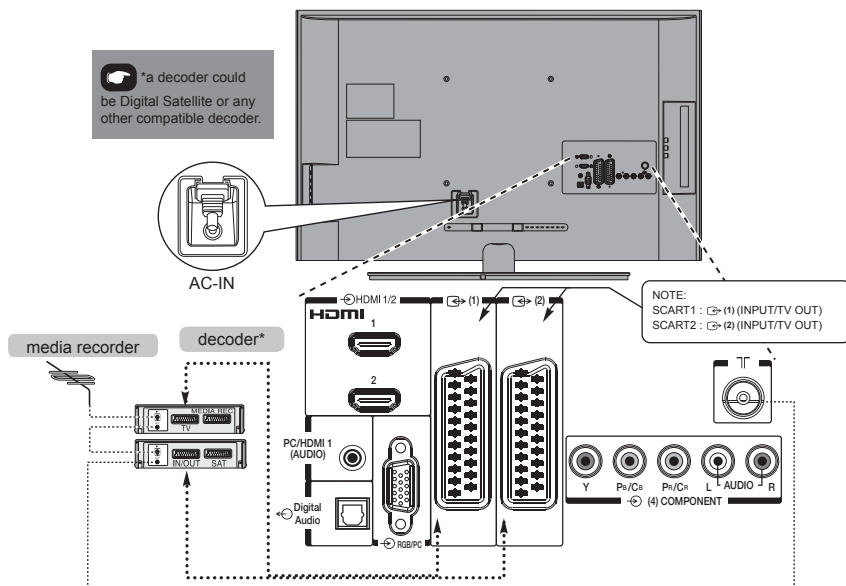

42SL738G:

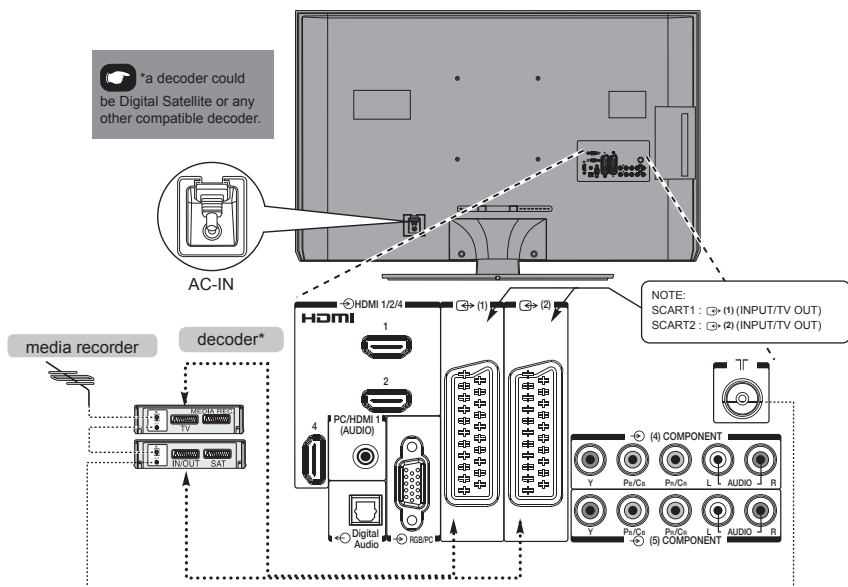

NOTE: SCART1 can support Canal+ decoder.

Aerial cables: -----

Connect the aerial to the ANT socket on the rear of the television. If you use a decoder and/or a media recorder, it is essential that the aerial cable is connected **through** the aerial socket on the decoder and/or on the media recorder **to** the TV.

SCART leads: -----

Connect the video recorder **IN/OUT** or decoder **TV** socket to the television. Connect the media recorder **SAT** socket to the decoder **MEDIA REC.** socket.

Before running **Auto Scan**, put your decoder and media recorder to **Standby**.

The phono sockets alongside the COMPONENT VIDEO INPUT sockets will accept L and R audio signals.

The phono sockets alongside the VIDEO INPUT socket will accept L and R audio signals. These sockets are located on the side of the TV. (See page 18.)

SPDIF (Optical Digital Audio Out) When a digital audio signal is associated with the input selected for viewing, the digital audio will be available on this SPDIF connection to your home theater system.

HDMI® (High-Definition Multimedia Interface) is for use with a DVD, decoder or electrical equipment with digital audio and video output. It is designed for best performance with 1080p high-definition video signals but will also accept and display VGA, SVGA, XGA, WXGA, SXGA, 480i, 480p, 576i, 576p, and 720p signals.

NOTE: Although this television is able to connect to HDMI equipment it is possible that some equipment may not operate correctly.

SETTING UP

REGZA-LINK controls the basic functions of connected audio/video equipment using the television's remote control.


A wide variety of external equipment can be connected to the back of the television, therefore the relevant owner's manuals for all additional equipment must be referred to.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press  to select.


REGZA-LINK Connections

The basic functions of connected audio/video equipment can be controlled using the television's remote control if a REGZA-LINK compatible device is connected.

19/22SL738G:

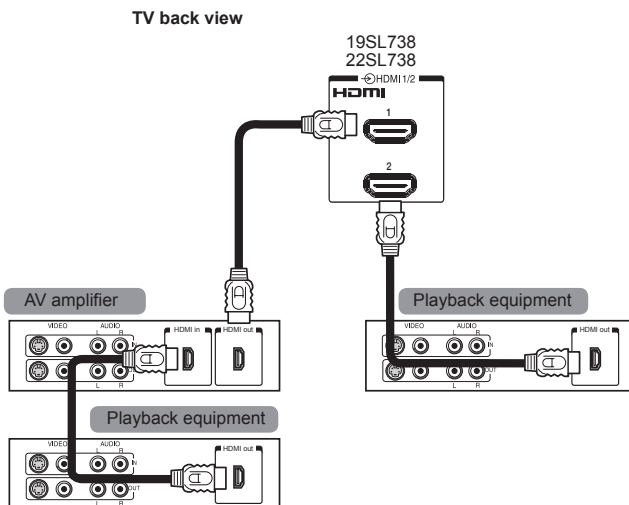


26/32SL738G:

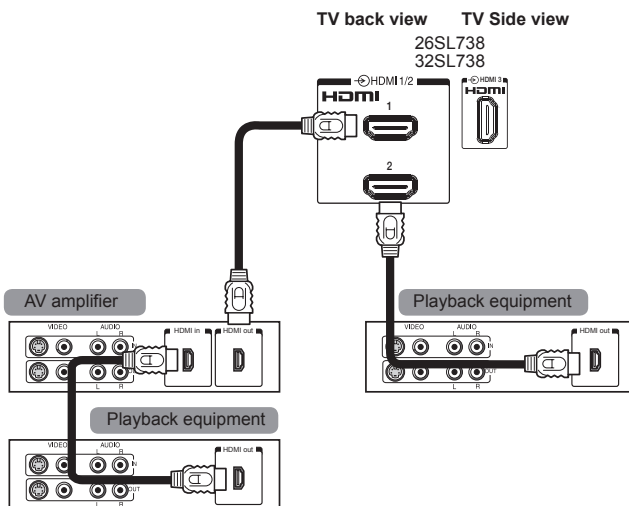

SETTING UP

42SL738G:

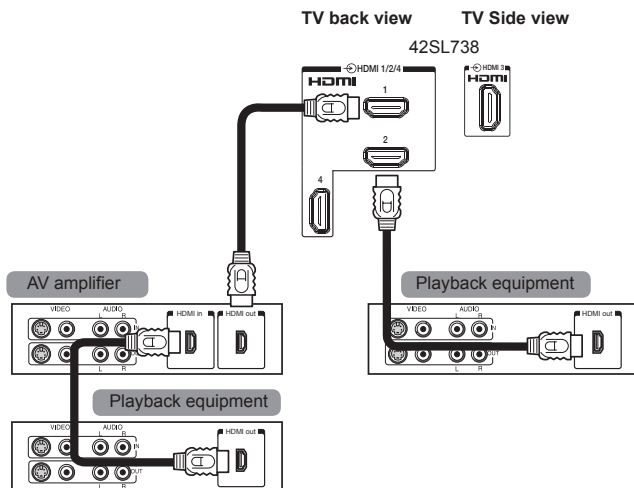

NOTE 1: It is recommended that for correct operation all audio/video devices are connected using **HDMI** cables branded with the **HDMI** logo (**HDMI**). If several devices are connected, the **REGZA-LINK** feature may not operate properly. After connecting the equipment use the **REGZA-LINK** menus to setup the desired options. The connected equipment must also be set. For details see the operation manual for each connected device.

NOTE 2: The **REGZA-LINK** feature uses **CEC** Technology as regulated by the **HDMI** standard. This feature is limited to models incorporating Toshiba's **REGZA-LINK**. However, Toshiba is not liable for those operations. Refer to individual instruction manuals for compatibility information.

Connecting an HDMI or DVI device to the HDMI input

The HDMI input on your television receives digital audio and uncompressed digital video from an HDMI source device, or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-Bandwidth Digital- Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic devices (such as a set-top box or DVD player with HDMI or DVI output). For acceptable video signal formats, see page 17.

NOTE:

- Some early HDMI equipment may not work properly with your latest HDMI TV, due to the adoption of a new standard.
- Supported Audio format: Linear PCM, sampling rate 32/44.1/48kHz.

To connect an HDMI device


Connect an HDMI cable (type A connector) to the HDMI terminal.

For proper operation, it is recommended that you use an HDMI cable with the HDMI Logo (**HDMI**).

- HDMI cable transfers both video and audio. Separate analogue audio cables are not required (see illustration).


19/22SL738G:


TV back view

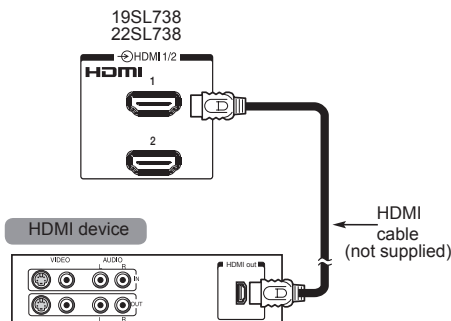

26/32SL738G:

TV back view TV side view

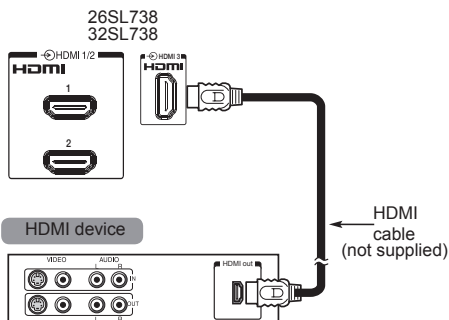

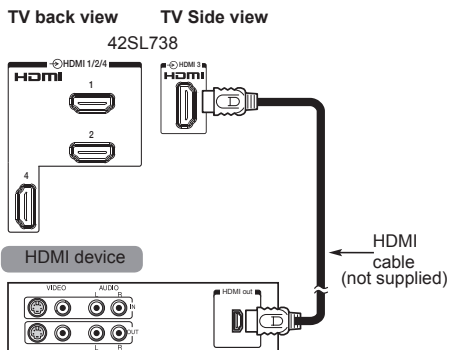
42SL738G:


To view the HDMI device video, press to select the mode.

To connect a DVI device

Connect an HDMI-to-DVI adapter cable (HDMI type A connector) to HDMI1 terminal and audio cables to the PC/HDMI1 Audio socket (see illustration).

- The recommended HDMI-to-DVI adapter cable length is 6.6 ft (2m).
An HDMI-to-DVI adapter cable transfers video only.
- Separate analogue audio cables are required.

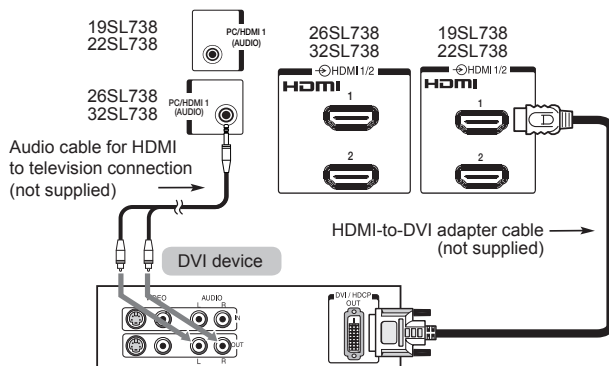19/22/26/32SL738G:**TV back view**

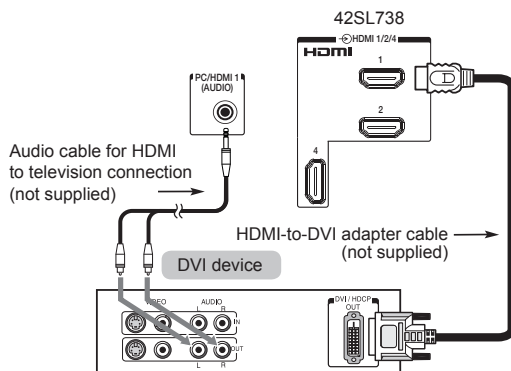42SL738G:**TV back view**

NOTE: To ensure that the HDMI or DVI device is reset properly, it is recommended that you follow these procedures:

- When turning on your electronic components, turn on the television first, and then the HDMI or DVI device.
- When turning off your electronic components, turn off the HDMI or DVI device first, and then the television.

[1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals. Because this is an evolving technology, it is possible that some devices may not operate properly with the television.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Connecting a computer

With the HDMI connection, you can watch your computer's display on the television and hear the sound from the television's speakers.


To connect a PC to the HDMI terminal

When connecting a PC to the HDMI terminal on the television, use an HDMI-to-DVI adapter cable and analogue audio cables.

If connecting a PC with an HDMI cable (type A connector). Separate analogue cables are not necessary (see page 13).


19/22/26/32SL738G:

TV back view

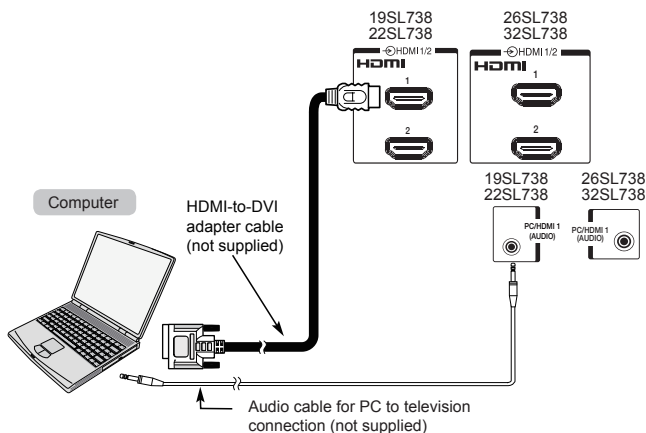

42SL738G:

TV back view

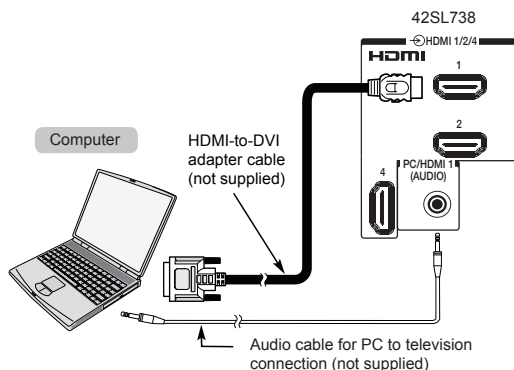

For acceptable PC signal formats, see "Acceptable PC signals through HDMI/D-SUB terminals" on page 17.

Acceptable Video signals through HDMI terminals

Format	Resolution	Refresh Rate	H. Frequency	Pixel Clock
VGA	640 x 480	60.000Hz	31.500kHz	25.200MHz
		59.940Hz	31.469kHz	25.175MHz
		72.809Hz	37.861kHz	31.500MHz
		75.000Hz	37.500kHz	31.500MHz
480i	720 x 480	60.000Hz	15.750kHz	27.000MHz
		59.940Hz	15.734kHz	27.000MHz
576i	720 x 576	50.000Hz	15.625kHz	27.000MHz
480p	720 x 480	60.000Hz	31.500kHz	27.027MHz
		59.940Hz	31.469kHz	27.000MHz
576p	720 x 576	50.000Hz	31.250kHz	27.000MHz
720p	1280 x 720	60.000Hz	45.000kHz	74.250MHz
		59.940Hz	44.955kHz	74.176MHz
		50.000Hz	37.500kHz	74.250MHz
1080i	1920 x 1080	60.000Hz	33.750kHz	74.250MHz
		59.940Hz	33.716kHz	74.176MHz
		50.000Hz	28.125kHz	74.250MHz
1080p	1920 x 1080	60.000Hz	67.500kHz	148.500MHz
		59.940Hz	67.433kHz	148.352MHz
		50.000Hz	56.250kHz	148.500MHz
		24.000Hz	27.000kHz	74.250MHz
		23.976Hz	26.975kHz	74.176MHz

Acceptable PC signals through HDMI/D-SUB terminals

Format	Resolution	Refresh Rate	H. Frequency	Pixel Clock
VGA (for D-Sub only)	640 x 480	59.940Hz	31.469kHz	25.175MHz
		72.809Hz	37.861kHz	31.500MHz
		75.000Hz	37.500kHz	31.500MHz
SVGA	800 x 600	56.250Hz	35.156kHz	36.000MHz
		60.317Hz	37.879kHz	40.000MHz
		72.188Hz	48.077kHz	50.000MHz
		75.000Hz	46.875kHz	49.500MHz
XGA	1024 x 768	60.004Hz	48.363kHz	65.000MHz
		70.069Hz	56.476kHz	75.000MHz
		75.029Hz	60.023kHz	78.750MHz
WXGA	1280 x 768	59.995Hz	47.396kHz	68.250MHz
		59.870Hz	47.776kHz	79.500MHz
		74.893Hz	60.289kHz	102.250MHz
	1360 x 768	60.015Hz	47.712kHz	85.500MHz
SXGA	1280 x 1024	60.020Hz	63.981kHz	108.000MHz
		75.025Hz	79.976kHz	135.000MHz

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

NOTE 1: The PC input signals are supported by the "HDMI 1" socket only.

NOTE 2: Only a supported PC signal will show the correct resolution on the TV display.


Using the controls

While all the necessary adjustments and controls for the television are done using the remote control, the buttons on the television may be used for some functions.


NOTE: COMMON INTERFACE (CI)


The common interface is for a Conditional Access Module (CAM). Contact a service provider for details.

19/22SL738G:

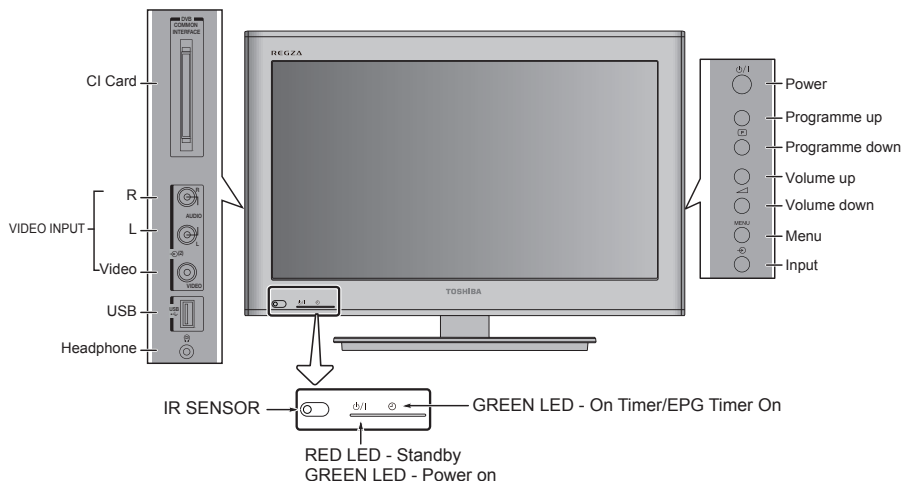

26/32SL738G:

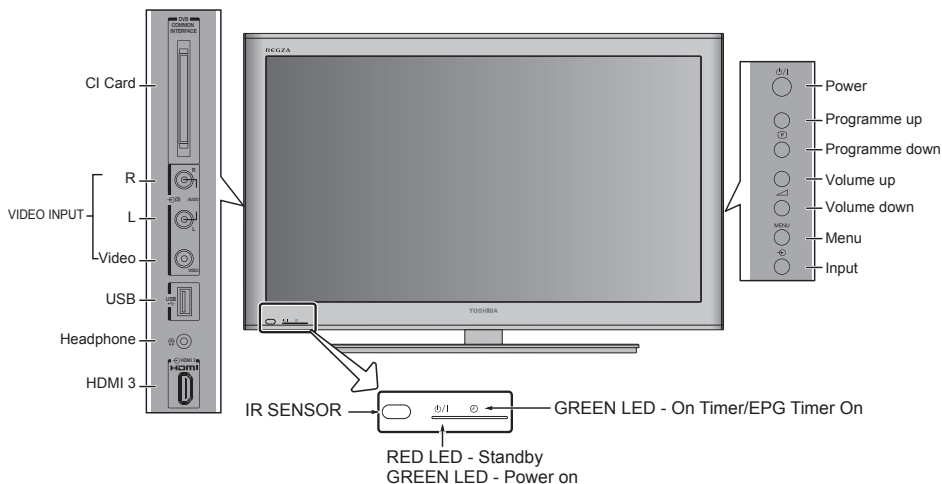

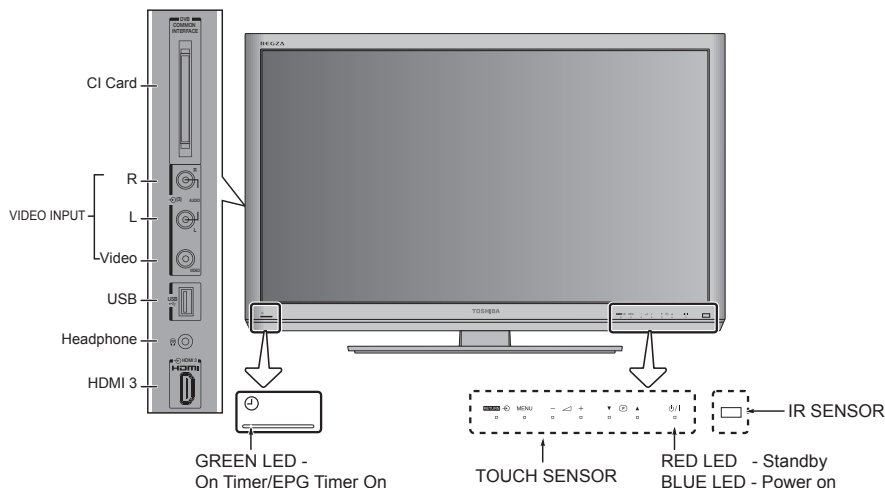42SL738G:

Switching on

Before switching on the television, make sure to connect the aerial cable, and select TV as the input source.

If the RED LED is off, check that the mains plug is connected to the power supply. If the picture does not appear, press on the remote control, it may take a few seconds to appear.

To put the television into Standby mode, press on the remote control. To view the picture, press again. The picture may take a few seconds to appear.

Using the remote control

To set up the television, you need to use the on-screen menus. Press on the remote control to see the menus.

The on-screen menu appears as a list of five topics. As each symbol is selected by pressing or on the navigation ring on the remote control, its respective options will appear below.

To use the options, press or on the navigation ring to move up or down through them and use , , or to select the required choice. Follow the on-screen instructions. The functions of each menu are described in detail throughout the manual.

Using the side-panel controls

To alter the volume, press .

To alter the programme position, press .

Press **MENU** and , , , or to control the sound and picture options. Press **MENU** to finish.

To select the external input, press to move through the list until the appropriate input source is selected as described on page 38.

Please always refer to the owner's manual of the equipment to be connected for full details.

Using the touch sensor

To use Touch Sensor on the television, use your finger to touch the indication on Touch Sensor.

To alter the volume, touch on .

To alter the programme position, touch on .

Touch **MENU** and or to control the sound and picture options. Touch **MENU** to finish.

To select the external input, touch to move through the list until the appropriate input source is selected as described on page 38.

Tuning the television


Before switching on the television, put your decoder and media recorder to **Standby** if they are connected.

Make sure to connect the aerial cable, and select TV as the input source.


To set up the television, press the buttons on the remote control as detailed on page 6.

Initial Setup

- 1 Connect the television to the main power and press the **⏻** button. The **Initial Setup** screen will appear at the first use. Press **OK** to start the initial setup.

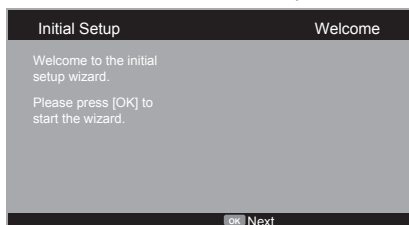


- 2 Press **▲** or **▼** to select your language, and then press **▶**.

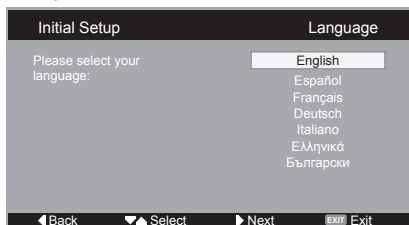


- 3 Press **▲** or **▼** to select between **Home** or **Store** mode (for normal home use, select **Home**), and then press **▶**.


If **Home** mode is selected, the **Standard** picture mode will be selected

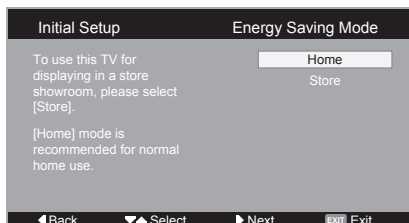

- 4 Press **▲** or **▼** to select your country and press **▶** to go to the next step.

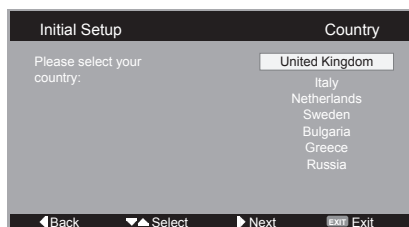


- 5 To start channel scan, press **▶**.

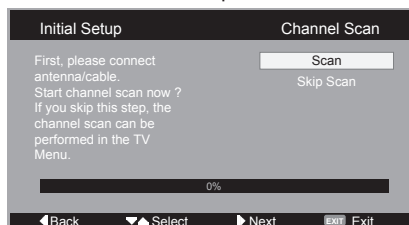

The search will begin for all available stations. The slide bar will move along the line as the search progresses.

- 6 The initial setup is now complete. Press **OK** to exit the wizard.

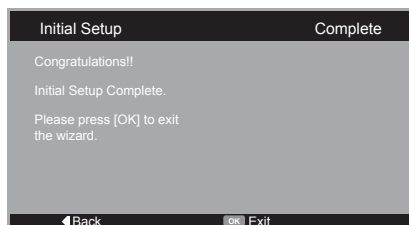

NOTE 1: If you skip this step, the channel scan can be performed in the TV Menu.

NOTE 2: The time will be set automatically using the broadcaster data but can be advanced or decreased by from -12 to +13 hours using **Time Zone** in **Time Setup**. (See page 37)

PLEASE NOTE

The **Factory Default** menu can also be accessed at any time in the **Parental** control from the **SETUP** menu.

Setting the programmes

NOTE: When Channel Block is activated the 4-digit password is needed to enter the **Channels** submenu under **SETUP** menu.


Auto Scan

The **Auto Scan** will completely re-tune the television and can be used to update the channel list.

It is recommended that **Auto Scan** is run periodically to ensure that all new services are added.

NOTE: All the current programmes and settings i.e. the locked programmes, will be lost.

- 1 Press **MENU** and press ◀ or ▶ to select **SETUP**.

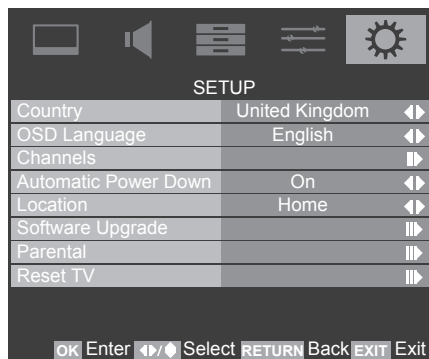


- 2 Press ▼ to highlight **Country** and press ◀ or ▶ to select.


NOTE: In order to receive the information from the broadcaster correctly, please set the correct country.

- 3 Press ▼ to highlight **OSD Language** and press ◀ or ▶ to select.


- 4 Press ▼ to highlight **Channels** and press ▶ or OK to enter.

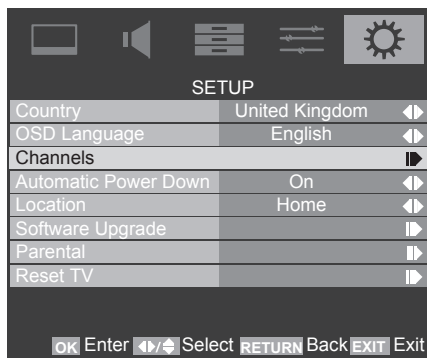

- 5 Select **Auto Scan** and press OK.

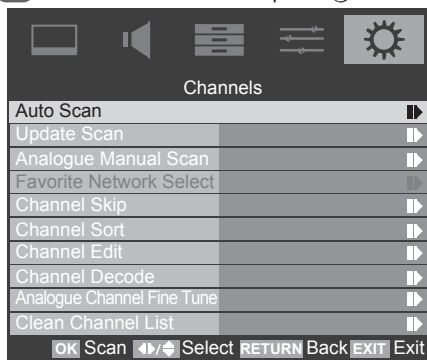


- 6 Press **Cancel** for no change, or press OK to enter Auto start screen.

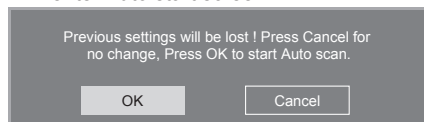

- 7 For **Country** option of **Finland, Germany, Switzerland, Norway, Sweden, Denmark** or **Others**, the **Scan Mode** option will be available if the **Tuner Mode** in **SETUP** menu is set to **Cable**.

- **Scan Mode:** The options are **Full, Quick, and Advance**. The **Quick scan** is a simplified version of the **Full scan** designed to complete in less time, and is available for **Country** option of **Finland** or **Others** only.

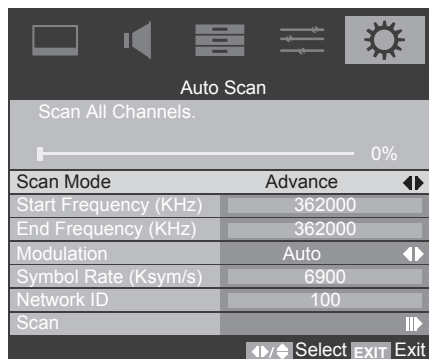


NOTE: The options **Start Frequency**, **End Frequency**, **Modulation**, **Symbol Rate**, and **Network ID** is available for **Advance** mode only.

- 8 Press ▲ or ▼ to highlight **Scan** and press ► or Ⓚ to start scanning. Press **RETURN** to cancel, or press **EXIT** to stop scanning.

Update Scan

Search the new channels that are not in the programme list.

- 1 Press **MENU** and press ◀ or ▶ to select **SETUP**.
- 2 Press ▼ to highlight **Channels** and press ► or Ⓚ.
- 3 Select **Update Scan** and press Ⓚ to start scanning.

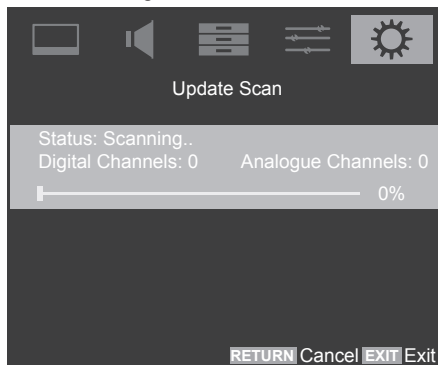


NOTE: This option is available for **DVB_T** only.

Single RF Scan

Scan single RF channels. You can check the Signal Strength and the Signal Quality.

- 1 Select **Channels** from the **SETUP** menu.
- 2 Highlight **Single RF Scan** and press ► or Ⓚ to enter.
- 3 Press ◀ and ▶ to select the **RF Channel**, then press Ⓚ to start scanning.

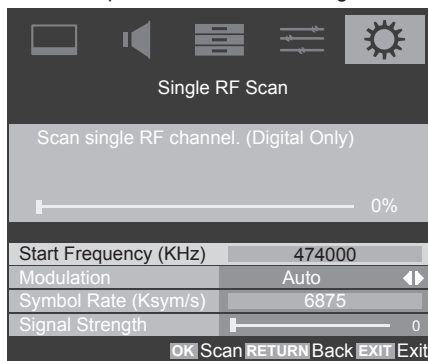


NOTE: This option is available for **DVB_C** and **DVB_T** only.


Favorite Network Select

If there are more than two networks detected after running the **Auto Scan** in **Channels** menu, you can select the network you prefer.

- 1 Select **Channels** from the **SETUP** menu.
- 2 Highlight **Favorite Network Select** and press ► or Ⓚ to enter.

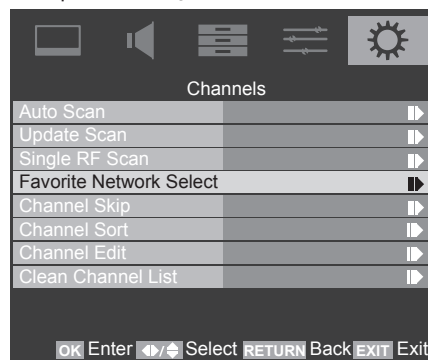

- 3 Press ▲ or ▼ to select the network you prefer, and then press **OK** to set.

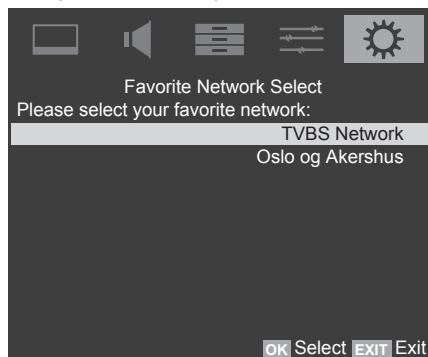


NOTE: This feature is available only for the **Country** option of **Norway**, and with **DVB_T** input source.


Analogue Manual Scan

The television can be tuned-in manually using **Analogue Manual Scan**. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another **System**.

- 1 Press **MENU** and press ◀ or ▶ to select **SETUP**.
- 2 Press ▼ to highlight **Channels** and press ▶ or **OK**.
- 3 Select **Analogue Manual Scan** and press ▶ or **OK** to confirm it.

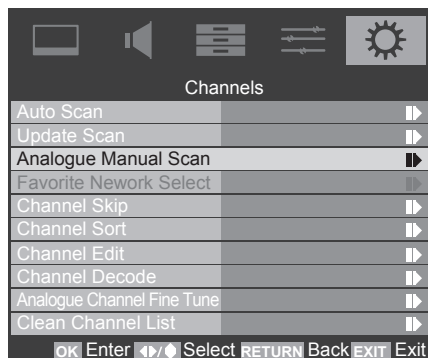

- 4 Press number buttons 0~9 to enter the Start Frequency. Press ▲ or ▼ to select **Scan Up** or **Scan Down** and press ▶ or **OK** to start scan. Press **EXIT** to stop scanning.

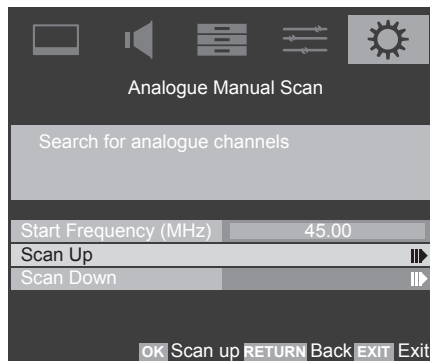


NOTE: This option is available for Analogue TV mode only.


Channel Skip

To prevent certain programmes from being viewed, the programme position can be skipped. The remote control must be removed as the channels will still be available using the number buttons. Programmes can then be watched as normal using the controls on the television, but the television will not show the skipped programme position.

- 1 In the **SETUP** menu, press ▼ to highlight **Channels** and press ▶ or **OK** to enter.

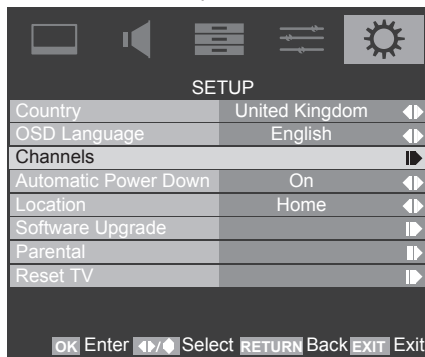

- 2** Press ▼ to highlight **Channel Skip** and press ► or Ⓚ to enter.

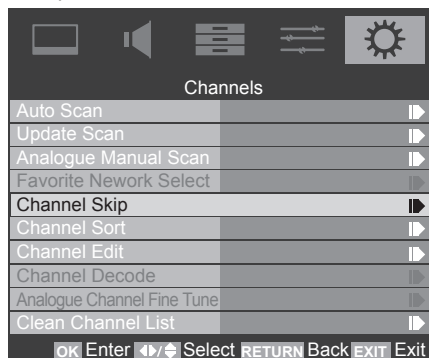

- 3** Press ▲ or ▼ to select the channels you want to skip, then press Ⓚ to set.




The Skipped programme positions **cannot** be selected by pressing P ▲ and P ▼ or by the controls on the television, but **can** still be accessed by the number buttons on the remote control.

Channel Sort

Change the order of the programme list.

- 1** Select **Channels** from the **SETUP** menu.
- 2** Highlight **Channel Sort** and press ► or Ⓚ to enter.
- 3** Press ▲ or ▼ to select the first channel you want for sorting and then press Ⓚ to mark it. Press ▲ or ▼ again to select the second channel and then press Ⓚ to swap their positions.

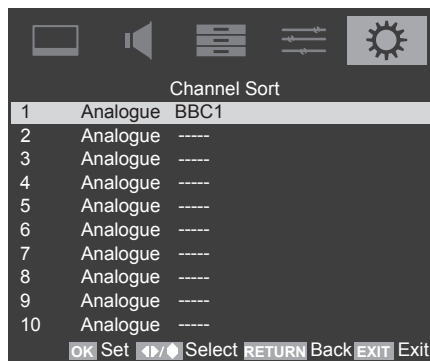

Channel Edit

Edit the channel number and channel name.

- 1** Select **Channels** from the **SETUP** menu.
- 2** Highlight **Channel Edit** and press ► or Ⓚ to enter.
- 3** Press ▲ or ▼ to highlight the channel you want for editing and press Ⓚ to enter the "Channel Edit" screen.
- 4** Edit the **Channel Number** by pressing the number buttons 0~9. Edit the **Channel Name** by pressing the number buttons 0~9 to enter numbers and letters.



NOTE: The option **Frequency**, **Colour system**, and **Sound system** is available for Analogue TV mode only.

The number buttons on the remote control have the following characters assigned to them. Use the language characters to enter text. Repeatedly pressing the numbered key changes the text.


character, pressing ◀ deletes the previous text character.

Number	Character
1	A B C 1
2	D E F 2
3	G H I 3
4	J K L 4
5	M N O 5
6	P Q R 6
7	S T U 7
8	V W X 8
9	Y Z 9
0	+ - . 0

Channel Decode

Channel Decode support the Canal+ (paid television channel); however, the channel also broadcast some un-encrypted programmes. These programmes without encryption can be viewed free of charge.

- 1 Select **Channels** from the **SETUP** menu.
- 2 Highlight **Channel Decode** and press ▶ or ⓧ to enter.
- 3 Press ▲ or ▼ to highlight the channel and press ⓧ to set.

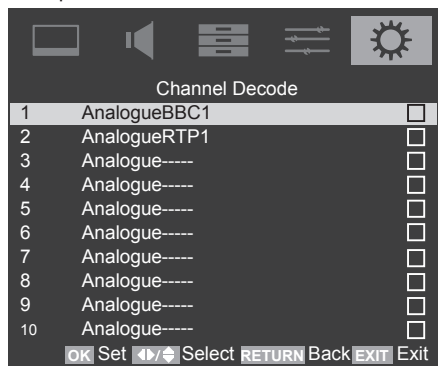


NOTE: This option is available for Analogue TV mode only.

Analogue Channel Fine Tune

When the reception is poor, you can use this function to do the fine tuning.


- 1 In the **SETUP** menu, press ▼ to highlight **Channels** and press ▶ or ⓧ to enter.
- 2 Press ▼ to highlight **Analogue Channel Fine Tune** and press ⓧ to enter.
- 3 Highlight and press ⓧ to select the channel.
- 4 Press ◀ or ▶ to adjust the frequency. Press ◀ to decrease and ▶ to increase the frequency.

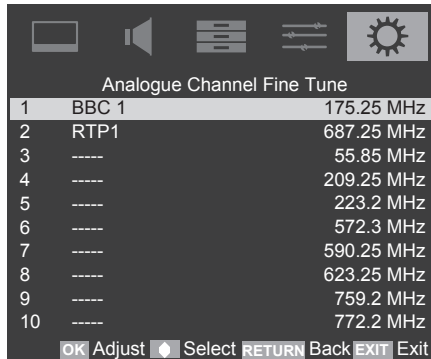


Clean Channel List

This feature cleans all the TV channels while your channel list is not empty.

- 1 In the **SETUP** menu, press ▼ to highlight **Channels** and press ▶ or ⓧ to enter.
- 2 Press ▼ to highlight **Clean Channel List** and press ▶ or ⓧ to enter.

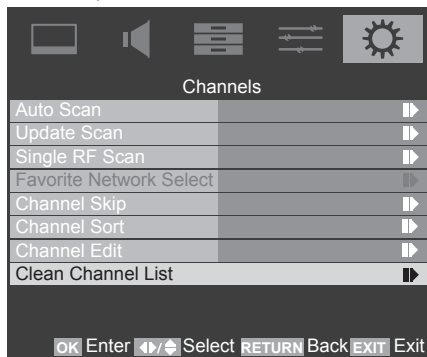


- 3 The **Clean Channel List** screen appears. Press ⓧ to clean now.

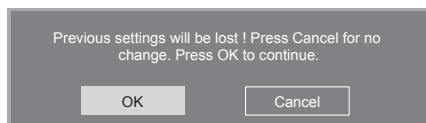

Common Interface

This function enables you to watch some pay services (encrypted services). When the module is inserted into the CI slot, you can access the module menu. To purchase a module and smart card, contact your dealer. Common Interface functions may not be possible depending upon the country broadcasting circumstances.

- 1 Press **MENU** and press ◀ or ▶ to select **APPLICATIONS**.
- 2 Press ▼ to highlight **Common Interface** and press ▶ or ⓧ.

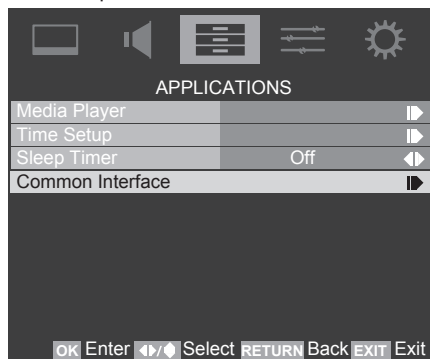

- 3 Press ⓧ to select the CI card to view the Module information.

Reset TV

Selecting **Reset TV** will reset all TV settings to their original factory values, excludes **Country**, **OSD Language**, and **Channels**.

- 1 In the **SETUP** menu, press ▼ to highlight **Reset TV** and press ▶ or ⓧ to enter.
- 2 Select **OK** to confirm or select **Cancel** to exit.

Automatic Power Down

The TV will automatically turn itself off (standby) after approximately 4 hours, if you do not touch the control buttons on the remote control or on the TV control panel.

- 1 In the **SETUP** menu, press ▼ to highlight **Automatic Power Down**.
- 2 Press ◀ or ▶ to select **On** or **Off**.

General controls

Selecting programme positions

To select a programme position, press the numbered buttons on remote control.

The programme positions can also be selected by pressing **P**  and **P** .

To display on-screen information, i.e. programme position, input mode, or stereo/mono signal, press . Press it again to cancel.

Time Display

The time display facility allows the current (text service) time to be seen on the television screen.

Press  on the remote control while watching a normal television broadcast to see the time display from the broadcaster. It will remain on screen for about 5 seconds.

NOTE: This option is available for Analogue TV mode only and may not be available in some cases.

Stereo and Bilingual transmissions

If the stereo or dual language broadcasts are transmitted, the icon  **Stereo** or  **Dual** will appear on the screen each time the programme positions are changed, and will disappear after a few seconds. If the broadcast is not in stereo, the icon  **Mono** will appear.

Stereo... Press /I to select **Stereo** or **Mono**.

Bilingual... Bilingual transmissions are rare. If they are transmitted, the icon  **Dual** will display. Choose the required programme number. If the  **Dual** appears, press /I to select **Dual1**, **Dual2**, or **Mono**.

Quick Access Menu

Quick access menu helps you access some options quickly, such as **Picture Mode**, **Picture Size**, **Sleep**, **REGZA-LINK**, and **Media Player**. Press **QUICK** button to display the **Quick access** menu and press  or  to select the option.

Quick access		
Picture Mode	Standard	
Picture Size	Wide	
Sleep	Off	
REGZA-LINK		
Media Player		

Sound controls

Volume

Volume


Press $\leq$ or $\geq$ to adjust the volume.

Sound Mute

Press $\times$ once to turn the sound off, press again to cancel.

Balance, Bass, Treble

- 1 Press **MENU** and $\blacktriangleleft$ or $\blacktriangleright$ to select **SOUND**.

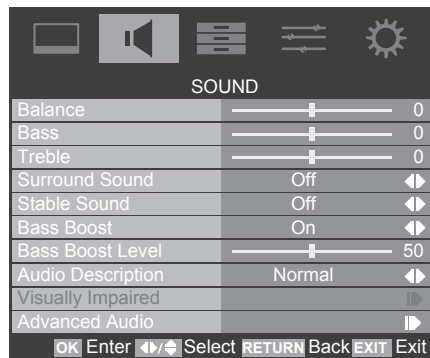

- 2 Press $\blacktriangledown$ to highlight **Balance**, **Bass** or **Treble**. Press $\blacktriangleleft$ or $\blacktriangleright$ to change the setting.

Surround Sound

This function enriches (expanding and deepening) the sound quality.

- 1 In the **SOUND** menu, press $\blacktriangledown$ to select **Surround Sound**.
- 2 Press $\blacktriangleleft$ or $\blacktriangleright$ to switch function **On** or **Off**.

Stable Sound®

Stable Sound reduces the volume level differences between channels. It automatically remains on the same volume level when you change channels.

- 1 In the **SOUND** menu, press $\blacktriangledown$ to select **Stable Sound**.
- 2 Press $\blacktriangleleft$ or $\blacktriangleright$ to switch function **On** or **Off**.

Bass Boost

Bass Boost enhances the depth of the sound on the TV speakers. The difference will only be noticeable on sound with strong bass.

- 1 In the **SOUND** menu, press $\blacktriangledown$ to highlight **Bass Boost**.
- 2 Press $\blacktriangleleft$ or $\blacktriangleright$ to switch function **On** or **Off**.

NOTE: The **Surround Sound** and **Bass Boost** functions are available for the sound from the TV's built-in speakers only.

Bass Boost Level

After setting the **Bass Boost** to **On** in the **SOUND** menu, you can adjust its level.

- 1 In the **SOUND** menu, press $\blacktriangledown$ to highlight **Bass Boost Level**.
- 2 Press $\blacktriangleleft$ or $\blacktriangleright$ to change the setting.

Audio Description

Audio Description is an additional narration describing on-screen action, body language, expressions and movements for people with visual disabilities while watching the TV. This function enables you to choose the type of narrations.

- 1 Press **MENU** and press $\blacktriangleleft$ or $\blacktriangleright$ to select **SOUND**.
- 2 Press $\blacktriangledown$ to highlight **Audio Description** and press $\blacktriangleleft$ or $\blacktriangleright$ to select **Normal**, **Hard of Hearing**, and **Visually Impaired**.

NOTE: Press **AD** button on the remote control to switch the **Audio Description** **On** or **Off**.


Hard of Hearing: This function provides narration to deaf and hard of hearing viewers.

Visually Impaired: This function provides descriptive narration of key visual elements - making television programmes, feature films, home video and other visual media accessible to people who are visually blind or visually impaired.

Visually Impaired

When the **Audio Description** is set to “**Visually Impaired**”, you can adjust the volume of the Audio Description.


- 1 Press **MENU** and press ◀ or ▶ to select **SOUND**.
- 2 Press ▼ to highlight **Audio Description** and use ◀ or ▶ to select **Visually Impaired**.
- 3 Press ▼ to highlight **Visually Impaired** and press ▶ or Ⓚ to enter.
- 4 Make sure the **Speaker Out** option is set to **On**. Press ▼ to highlight **Volume** option, and press ◀ or ▶ to adjust the volume.

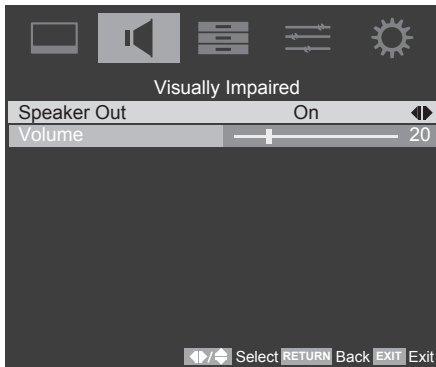

Advanced Audio Settings

The **Advanced Audio settings** help to create an enhanced surround sound experience with deep, rich bass from stereo sound sources. Your TV's audio will sound fuller, richer, and wider.

Highlight the **Advanced Audio** in the **SOUND** menu and press ▶ or Ⓚ to enter the **Advanced Audio** settings.

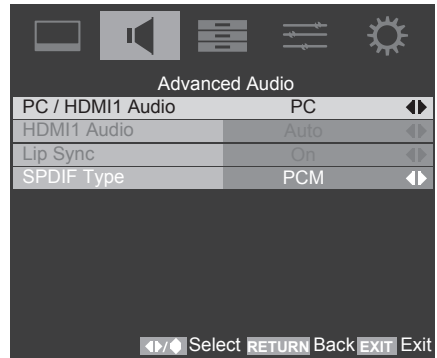

- **PC/HDMI1 Audio:** Receive sound from a connected PC.
- **HDMI1 Audio:** If the connected HDMI source does not support digital audio, plug the audio cable into PC/HDMI1 (Audio) on the back of the TV, then use the HDMI1 Audio setting. If the sound is missing, select an alternative setting.
- **Lip Sync:** Activates an audio/video display timing adjustment that allows HDMI devices to automatically synchronize accurately. Available for HDMI source only.
- **SPDIF Type:** Sends digital audio signal to the external audio system. The options are **PCM**, **Dolby Digital**, or **Off**.



Manufactured under licence from Dolby Laboratories.


"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Widescreen viewing

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats.


Native

This setting is available when watching video signal source via HDMI, and will show the picture without over scan.

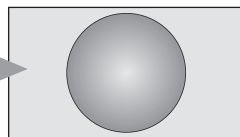


Wide


Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen.

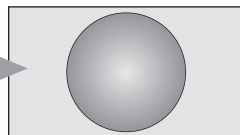

Cinema

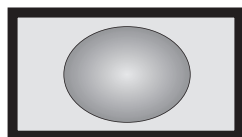


When watching "all sides panel format" films/video tapes, this setting will eliminate or reduce the black bars at all sides of the screen by zooming in and selecting the image without distortion.

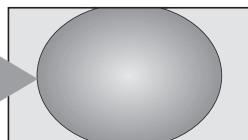


4:3


Use this setting to view a true 4:3 broadcast.

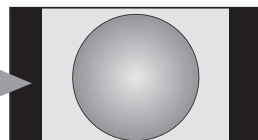

Super Live

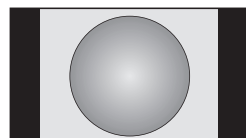


This setting will enlarge a 4:3 image to fit the screen by stretching the image horizontally and vertically, holding better proportions at the centre of the image. Some distortion may occur.

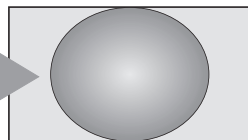


Subtitle

When subtitles are included on a letterbox format broadcast, this setting will raise the picture to ensure that all the text is displayed.

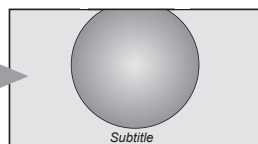


14:9

Use this setting when watching a 14:9 broadcast.

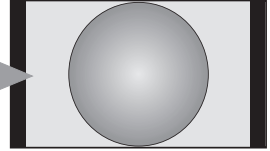


PC Wide

Use this setting for PC connected via HDMI or RGB/PC terminal when receiving PC signal format. This setting will display the image without picture clipping.

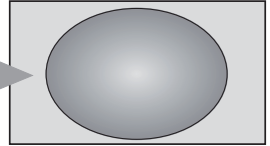


PC Normal

Use this setting for PC connected via HDMI or RGB/PC terminal when receiving PC signal format. This setting will display the image correctly without distortion or picture clipping.

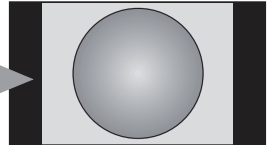

Dot by Dot

"Dot by Dot" is a non-scaling display. Depending on the input signal format, the picture is displayed with side panels and/or bars at the top and bottom (i.e. VGA input source).

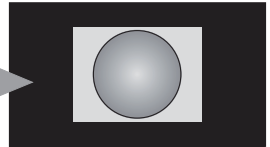

Press **QUICK** to display the **Quick access** menu and press ▼ or ▲ to select the **Picture Size** and press ⓧ.

You can choose the picture size from Wide, Cinema, 4:3, Super Live, Subtitle, 14:9, Native, PC Wide, PC Normal, and Dot by Dot.

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

Quick access		
Picture Mode	Standard	▶▶
Picture Size	Wide	▶▶
Sleep	Off	◀◀
REGZA-LINK		▶▶
Media Player		▶▶

Available Picture Size


Screen Mode	SD (up to 480p)	HD (up to 1080p)	PC Mode
Wide	Yes	Yes	No
4:3	Yes	Yes	No
Super Live	Yes	No	No
Cinema	Yes	No	No
Subtitle	Yes	No	No
14:9	Yes	No	No
Native	Yes(only in HDMI)	Yes(only in HDMI)	No
PC Wide	No	No	Yes
PC Normal	No	No	Yes
Dot by Dot	No	No	Yes

Picture controls

Picture Mode

You can adjust the best picture appearance by selecting the preset value in picture mode based on the programme category.

- 1 Press **MENU** and press ◀ or ▶ to select **PICTURE**.
- 2 Press ▼ to highlight **Picture Mode** and press ◀ or ▶ to select **Store, Dynamic, Standard, Movie, PC, or User**.

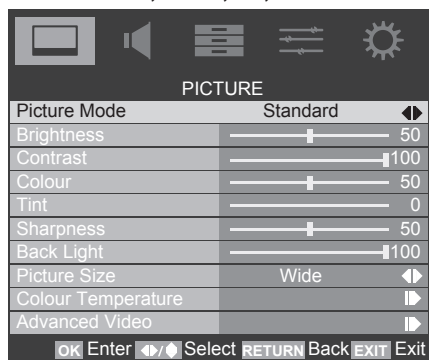

NOTE: The **Store** mode is available only when the **Location** in **SETUP** menu is set to **Store**.

Brightness, Contrast, Colour and Tint

- 1 In the **PICTURE** menu, press ▼ to select **Brightness, Contrast, Colour or Tint**.
- 2 Press ◀ or ▶ to adjust your preference.

Sharpness


This function increase or decrease the sharpness of the picture. The picture shows the clear edge when you increase the values.

- 1 In the **PICTURE** menu, press ▼ to select **Sharpness**.
- 2 Press ◀ or ▶ to adjust your preference.

Back Light Adjustment

Adjusting the **Back Light** can improve the clarity of the screen when viewing.


- 1 Press **MENU** and press ◀ or ▶ to select **PICTURE**.
- 2 Press ▼ to highlight **Back Light** and press ◀ or ▶ to adjust.

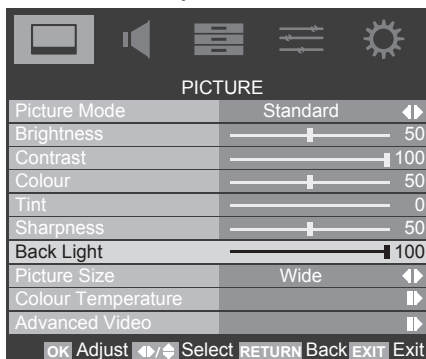


Colour Temperature

Colour Temperature increases the 'warmth' or 'coolness' of a picture by increasing the red or blue tint.

- 1 In the **PICTURE** menu, press ▼ to highlight **Colour Temperature** and press ▶ or ⓧ to enter.

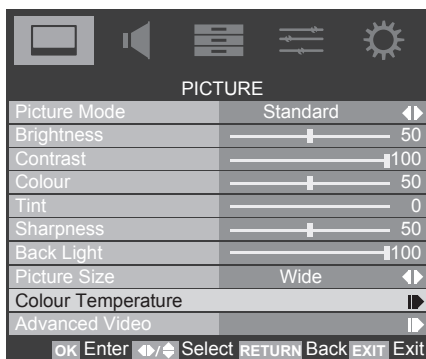

- 2 Press ◀ or ▶ to select **Cool, Medium, Warm** or **User** to suit your preference.

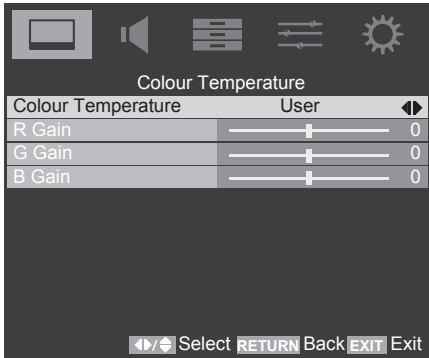


NOTE: R/G/B Gain: Increase or decrease the red/green/blue levels in the picture.

Cinema Mode

The frame rate of a movie film is generally 24 frames a second whereas the movie software such as DVD, etc. that you enjoy watching on television at home is 30 or 25 frames a second. The difference in frame rate may cause flickers while viewing the films on television; set the **Cinema Mode** to convert the signal to reproduce a smooth motion and picture quality.


- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ▶ to enter.
- 2 Press ▼ to highlight **Cinema Mode**, and press ◀ or ▶ select from **On** or **Off**.

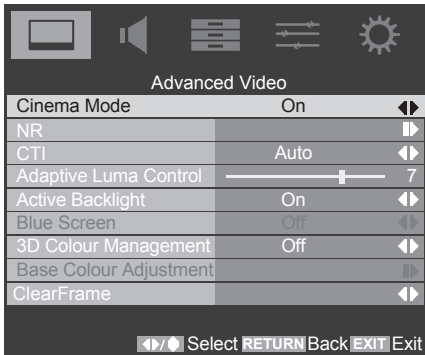

DNR

DNR (Digital Noise Reduction) enables you to 'soften' the screen representation of a weak signal to reduce the noise effect.

- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ▶ or ⓧ to enter.
- 2 Press ▲ or ▼ to highlight **NR** and press ▶ or ⓧ to enter.
- 3 Press ▲ or ▼ to highlight **DNR** and press ◀ or ▶ to select **Low, Middle, High, Auto** or **Off**.

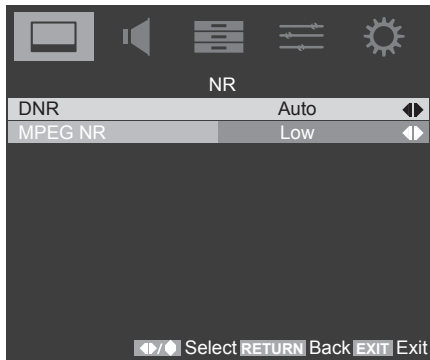

MPEG NR

If the receiving signal of MPEG has a grained noise depending on the compression and conversion, the noise may be reduced when using this function.

- 1 In the **PICTURE** menu, press ▲ or ▼ to highlight **Advanced Video** and press ► or Ⓚ to enter.
- 2 Press ▲ or ▼ to highlight **NR** and press ► or Ⓚ to enter.
- 3 Select the **MPEG NR** and press ◀ or ▶ to select **Low**, **Middle**, **High**, or **Off**.



CTI

The Colour Transient Improvement (CTI) involves the detection and sharpening of edges around colour objects on the screen.

- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ► or Ⓚ to enter.
- 2 Select the **CTI**, and press ◀ or ▶ to select **Auto** or **Off**.

Adaptive Luma Control

Automatically adjusts the brightness and contrast after analyzing the input signal. This function enriches the colours and the depth of the picture.

- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ► or Ⓚ to enter.
- 2 Press ▼ to highlight **Adaptive Luma Control** and press ◀ or ▶ to adjust your preference.

Active Backlight

When Active Backlight control is activated, it will automatically optimise the backlighting levels for dark scenes.

- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ► to enter.
- 2 Press ▼ to highlight **Active Backlight** and press ◀ or ▶ to select **On** or **Off**.

Blue Screen


When **Blue Screen** is selected, the screen will turn blue and the sound will be muted when no signal is received.

- 1 In the **PICTURE** menu, press ▼ to highlight **Advanced Video** and press ► or Ⓚ to enter.
- 2 Press ▼ to highlight **Blue Screen** and press ◀ or ▶ to select **On** or **Off**.

3D Colour Management

When **3D Colour Management** is selected, it allows the 'Base Colour Adjustment' feature to become available.

- 1 In the **PICTURE** menu, press ▲ or ▼ to highlight **Advanced Video** and press ► or Ⓚ to enter.
- 2 Press ▲ or ▼ to highlight **3D Colour Management**.

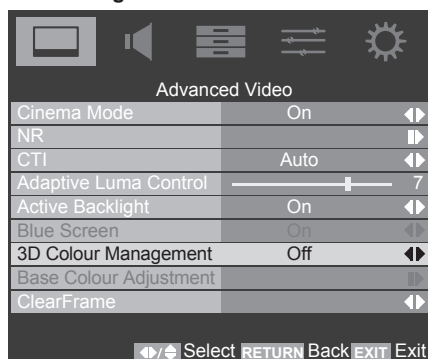


- 3 Press ◀ or ▶ to select **On** or **Off**.


Base Colour Adjustment

The **Base Colour Adjustment** feature allows the adjustment of individual colours to suit personal preference. This can be useful when using an external source. It only can be adjusted when Colour Management is set to On.


- 1 Highlight **Advanced Video** in the **PICTURE** menu. Press **▲** or **▼** to highlight **3D Colour Management** and press **◀** or **▶** to select **On**.

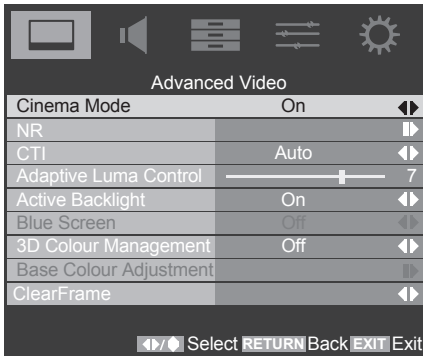

- 2 Press **▲** or **▼** to highlight **Base Colour Adjustment** and then press **▶** or **OK**.

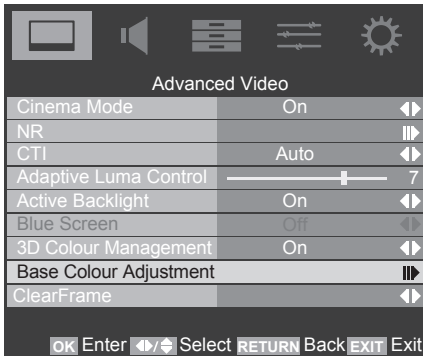

- 3 Press **▲** or **▼** to select an option, then press **OK** to enter the adjustment setting window.

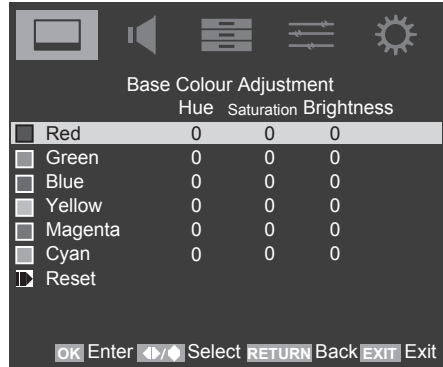

- 4 Press **◀** or **▶** to select **Hue**, **Saturation**, or **Brightness**, then press **▲** or **▼** to adjust the settings as required.

NOTE: To return to the original factory settings, select **Reset** and press **OK**.

HDMI RGB Range

Adjusts RGB full range signal automatically. When **Limit** is selected the RGB signal's output range is 16 to 235. When **Full** is selected the RGB signal's output range is 0 to 255.


- 1 In the **PICTURE** menu, press **▲** or **▼** to highlight **Advanced Video** and press **▶** or **OK** to enter.
- 2 Press **▲** or **▼** to highlight **HDMI RGB Range** and press **◀** or **▶** to select **Auto**, **Full**, or **Limit**.

NOTE: If the HDMI connection is capable of 1080p and/or the television is capable of refresh rates greater than 50Hz or supports Deep Colour, a Category 2 cable will be required. Conventional HDMI/DVI cables may not work properly with this mode.

H./V. Position

Adjust the horizontal and vertical position of the picture.

- 1 In the **PICTURE** menu, press ▲ or ▼ to highlight **Advanced Video** and press ► or ⓧ to enter.
- 2 Press ▼ to highlight **H./V. Position** and press ► or ⓧ to enter.

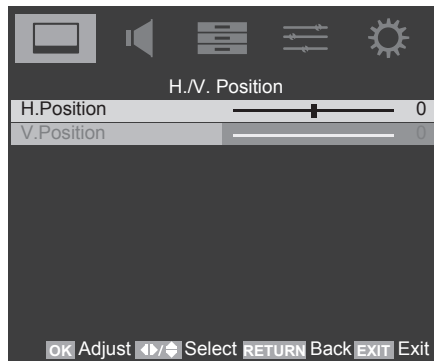


- 3 Press ▲ or ▼ to select **H. Position** or **V. Position** and press ◀ or ▶ to adjust.

NOTE: For PC input, V. Position adjustment is not linear. In another words, when you adjust V. Position, the OSD value will change by 2 or greater value depending TV's calibration process.

ClearFrame

The **ClearFrame** feature doubles the displayed frame rate to 100 frames per second or 100 Hz.

- 1 In the **PICTURE** menu, press ▲ or ▼ to highlight **Advanced Video** and press ► or ⓧ to enter.
- 2 Press ▼ to highlight **ClearFrame** and press ► or ⓧ to enter.

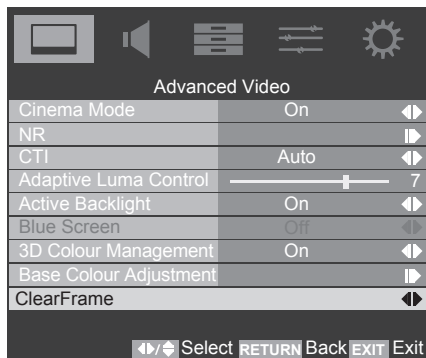


- 3 Press ▲ or ▼ to select **Low**, **Middle**, **High**, or **Off**.

NOTE: This feature is available for model 42SL738G only.

PC

The PC adjustment is available only when the input source is PC and your TV is receiving a computer signal.

- 1 In the **PICTURE** menu, press ▼ to highlight **PC** and press ► or ⓧ to enter.
- 2 Select **Auto Adjust** for automatic adjusting, or press ◀ or ▶ to manually adjust the **H.Position**, **V.Position**, **Phase**, or **Clock**.

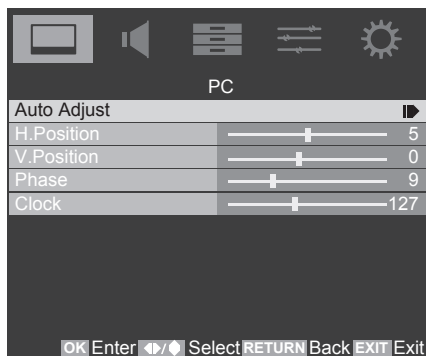


Timer control

Time Zone

When you select a **Time Zone**, the TV time is set by the time offset information based on Time Zone and GMT (Greenwich Mean Time) which is received with the broadcast signal and the time is set automatically by a digital signal.

- 1 Highlight the **Time Setup** in the **APPLICATIONS** menu and press ► or ⓧ to select **Time Zone**.

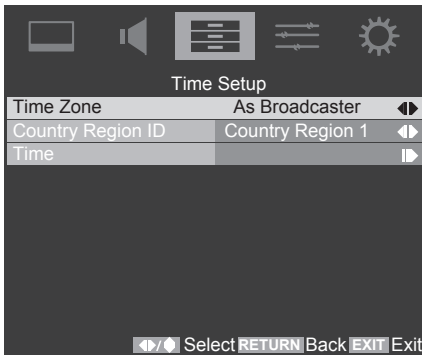

- 2 Press ◀ or ▶ to select your viewing area or "**As Broadcaster**".

Country Region ID


This option is only available for Country option of **Spain** or **Portugal** and **Time Zone** is set to **As Broadcaster**.

Time


The time is set automatically when receiving a digital signal. (You can set the time manually only if the TV has no DTV signal.)

You must set the time correctly before using **Power On/Off** Timer function.


- 1 Highlight the **Time Setup** in the **APPLICATIONS** menu and press ► or ⓧ to enter.

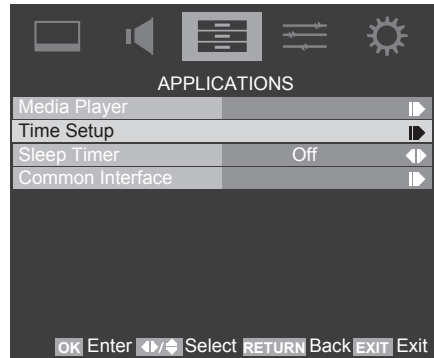

- 2 Press ◀ or ▶ to set the **Auto Synchronization On/Off**.

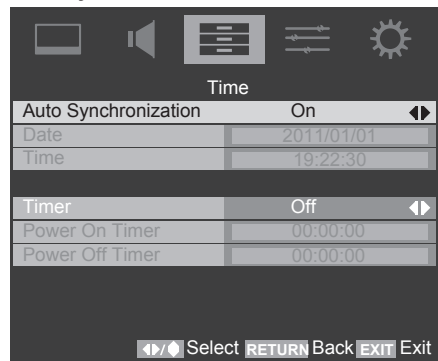

- 3 If you set the **Auto Synchronization Off**, you can set the **Date** and **Time** manually by pressing ▲, ▼, ◀ and ▶ to select position, and pressing the number buttons 0~9 to enter the figures.
- 4 Press ▲, ▼, ◀ and ▶ to select the **Power On/Off Timer**.

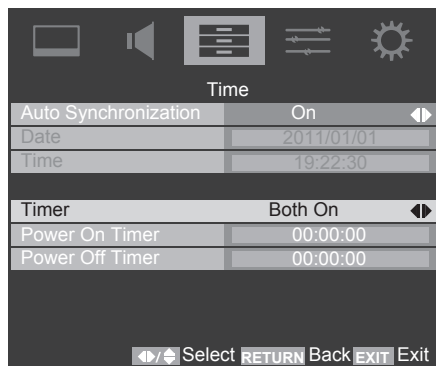


The **Power On Timer** function switches the TV on automatically at a preset time.

The **Power Off Timer** function switches the TV off automatically at a preset time.

Sleep Timer

The television can be set to turn itself **Off** automatically after a preset time.

- 1 Press **▼** to highlight **Sleep Timer** in the **APPLICATIONS** menu.
- 2 Press **◀** or **▶** to set the timer from Off, 10, 20, 30, 40, 50, 60, 90 or 120 Minutes.

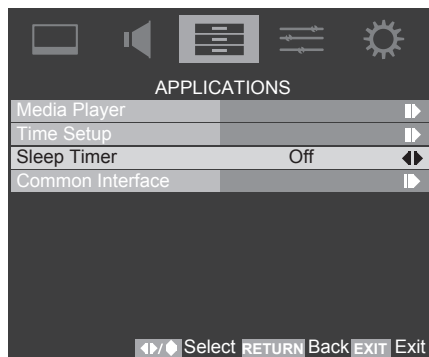

NOTE: To cancel the **Sleep Timer**, select **Off** in above setting.

Input selection and AV connections

Defining the **INPUT** and **OUTPUT** sockets so that the television recognises connected equipment.

See page 8 for a clear view of the back connection recommendations.

Most media recorders and decoders send a signal through the SCART lead to switch the television to the correct Input socket.

Alternatively press the external source selection button **↻** until the picture from connected equipment is shown.

Input selection

Use the input selection if the television does not switch over automatically.

- 1 Press **↻**. A list will appear on screen showing all stored external equipment. Press **▲** and **▼** to highlight and **OK** to select.

19/22SL738G:

Main
✓ TV
⊖ 1
⊖ 2
⊖ 3C
HDMI 1
HDMI 2
PC

26/32SL738G:

Main
✓ TV
⊖ 1
⊖ 2
⊖ 3
⊖ 4C
HDMI 1
HDMI 2
HDMI 3
PC

42SL738G:


Main
✓ TV
⊖ 1
⊖ 2
⊖ 3
⊖ 4C
⊖ 5C
HDMI 1
HDMI 2
HDMI 3
HDMI 4
PC

HDMI® displays equipment connected to Input HDMI on the back or side of the television. It is designed for best performance with 1080p high definition signals.


Input signal selection

This specifies the type of signal going into SCART on the back of the television. Please refer to the manufacturers instructions for the connected equipment.

- 1** In the **SETUP** menu, press **▼** to highlight **SCART**, then press **►** or **OK** to enter.

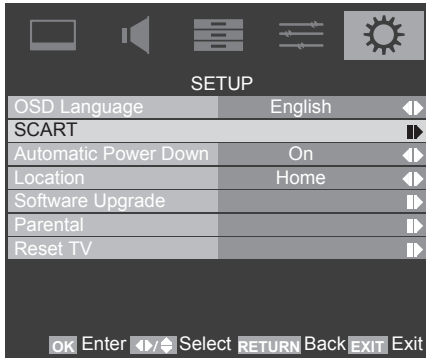


- 2** **19/22SL738G:**
Press **◀** or **▶** to select **Auto**, **Mixed**, **RGB**, **Composite**, or **S-Video**.

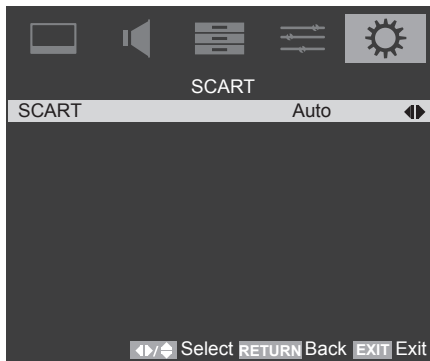

26/32/42SL738G:

- Press **▲** or **▼** to select **SCART 1** and press **◀** or **▶** to select **Auto**, **Mixed**, **RGB**, **Composite**, or **S-Video**.
- Press **▲** or **▼** to select **SCART 2** and press **◀** or **▶** to select **Auto**, **Composite**, or **S-Video**.

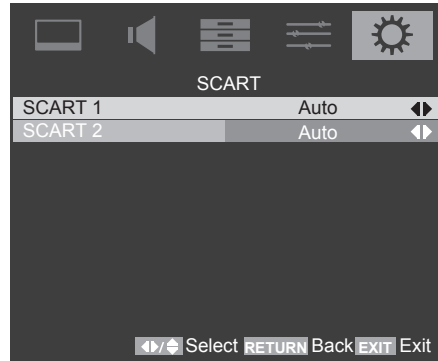

Check the signal output of the DVD or compatible device, please select the correct setting for "SCART input".

REGZA-LINK Controls

This feature uses **CEC** (Consumer Electronics Control) technology, and allows the control of Toshiba **REGZA-LINK** compatible equipment from the television's remote control.

NOTE: Not all Toshiba products currently support **REGZA-LINK**.

Equipment Control

The **REGZA-LINK** mode on the television's remote control allows the control of connected **REGZA-LINK** equipment being watched.

To control the **REGZA-LINK** input source, first select the equipment with **REGZA-LINK** input source selection, then switch the mode on the remote control to **REGZA-LINK** and press any buttons.

The available functions are dependent on the equipment connected. Not all the remote control keys may be available. Please refer to the operation manual for each piece of equipment connected.

NOTE: The television features that can be controlled by the connected equipment are: Standby, Volume, Channel, Sound Mute, Display Information, Number Buttons and Previous Programme.

Input Source Selection

When any equipment using **CEC** technology is connected, the **REGZA-LINK** icon will appear in the input source list allowing selection of individual devices.

- 1 Press . A list will appear on screen showing modes and all stored external equipment.

Main	
✓ TV	
 1	
 2	
 3	
 4C	
HDMI 1	
HDMI 2	
HDMI 3	
PC	

- 2 The **REGZA-LINK** icon appears automatically after detected with **REGZA-LINK** compatible equipment. Press  to highlight the input source shown with the **REGZA-LINK** icon.

Main	
TV	
 1	
 2	
 3	
 4C	
✓ HDMI 1	
HDMI 2	
HDMI 3	
PC	

- 3 Press . A second selection screen will appear showing all connected **REGZA-LINK** equipment.
- 4 Press  or  to highlight an input source, and then press  to select.

NOTE 1: When the television is switched on, it will take a few minutes for the **REGZA-LINK** icon to appear in the list, when an HDMI cable is removed, it will take a few minutes for the logo to disappear.

NOTE 2: If the HDMI cable from the connected equipment is changed, or HDMI equipment settings are changed, the **Enable REGZA-LINK** in the **REGZA-LINK** setup menu may need to be reset to On.

NOTE 3: When the **REGZA-LINK** input source is selected, some **REGZA-LINK** equipment may automatically switch on.

The following features are dependent on the connected equipment. For operating information, refer to the operation manual for all connected equipment.

Pass-Through Control

The Pass-Through feature allows you to control the connected REGZA-LINK device by the television's remote control.

- 1 Press ▲ or ▼ to select REGZA-LINK in the Quick Access Menu, and then press OK. The control panel will appear.

When there are two or more REGZA-LINK devices connected to the television, a device selection menu will appear. Highlight the device you want to control, and then press OK to select.



- 2 Press the key on the television's remote control as guided by the control panel shown.

NOTE: The available functions are dependent on the connected equipment, **not all the remote functions may be available.** Please refer to the operation manual of the connected equipment.

REGZA-LINK Menus

By activating the **Enable REGZA-LINK** feature in the **REGZA-LINK** setup menu, individual REGZA-LINK features can then be activated.

One Touch Play

The function of **REGZA-LINK** will automatically power on the television that was in standby mode and switch the television's input source to the port connected with the audio/video equipment by powering-on or playing from the audio/video equipment.

NOTE: This feature is dependent on the connected equipment and television setting.

System Standby

This feature automatically switches the connected equipment into standby when the television goes into standby and conversely for the television to switch into standby when connected equipment goes into standby. It is selected in the **REGZA-LINK** setup menu.

NOTE: This feature is dependent on the connected equipment and television setting.

System Audio Control

Using the **Speaker Preference** feature allows the television's remote control to adjust the volume or mute the sound of the speakers connected to the television via an AV amplifier.

Ensure that the connected AV amplifier and **REGZA-LINK** equipment are selected in the input source selection and that the **Speaker Preference** is set to **Amplifier** in the **REGZA-LINK** setup menu.

NOTE: When the AV Amplifier is switched on, its input source changed or the volume adjusted, the sound will be output from the AV Amplifier's speakers even if TV Speakers has been selected. Turn the television off then on again to output the sound from the TV's speakers.

The full function may not work and is dependent on the Amplifier being used.

PC Link


This feature automatically adjusts the suitable widescreen formats and picture preferences when connected to a **REGZA-LINK PC**.

NOTE: This feature is dependent on the connected equipment.


Enable REGZA-LINK

When the **Enable REGZA-LINK** is set to On, it allows the other functions to be enabled.

- 1 In the **PREFERENCES** menu, press ▼ to select **REGZA-LINK Setup**, and then press ► or ◀.

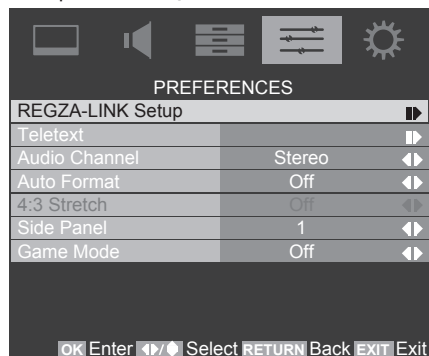

- 2 Press ▼ to highlight **Enable REGZA-LINK**, then press ◀ or ► to select **On** or **Off**.

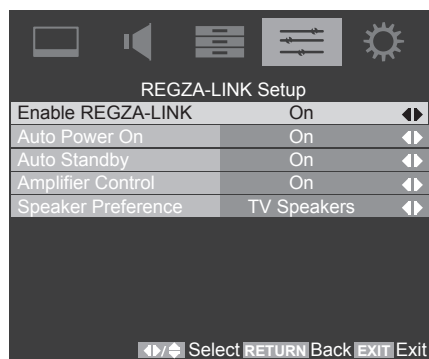

Auto Power On

The **Auto Power On** setting allows the television to be automatically switched **On** or **Off** if a **REGZA-LINK** device is turned **On** or **Off**.

- 1 In the **REGZA-LINK Setup** menu, press ▼ to highlight **Auto Power On**.
- 2 Press ◀ or ► to select **On** or **Off**.

Auto Standby

When the **Auto Standby** is enabled, switching off the television will automatically switch off all connected **REGZA-LINK** equipment.

- 1 In the **REGZA-LINK Setup** menu, press ▼ to highlight **Auto Standby**.
- 2 Press ◀ or ► to select **On** or **Off**.

Amplifier Control

When **Amplifier Control** is enabled **REGZA-LINK** allows some of the amplifier features to be controlled with the television remote control.

- 1 In the **REGZA-LINK Setup** menu, press ▼ to highlight **Amplifier Control**.
- 2 Press ◀ or ► to select **On** or **Off**.

Speaker Preference

This feature allows the audio output preference to be set to the TV speakers or AV amplifier speakers. The AV Amplifier option lets the televisions remote control adjust or mute the volume of the audio.


- 1 In the **REGZA-LINK Setup** menu, press ▼ to highlight **Speaker Preference**.
- 2 Press ◀ or ► to select **TV Speakers** or **Amplifier**.

Media Player


Enter Media Player

The Media Player allows the viewing of photos (JPEG files) and music (MP3 files) stored in a USB storage device. (Connectivity is not guaranteed for all devices.)

- 1 To open Media Player, highlight the **Media Player** in the **APPLICATIONS** menu and press **▶** or **OK**.

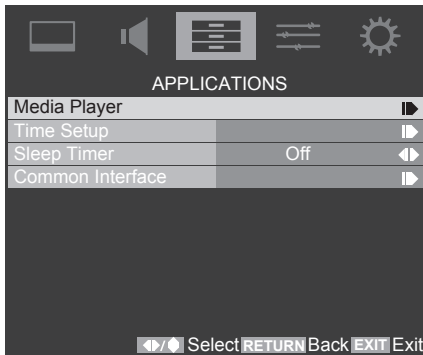

- 2 Press **▲** or **▼** to highlight **Photo** or **Music**, then press **OK**, the Media Player will open. You may also use the **Quick Access** Menu to enter.



NOTE 1: The Media Player will open even if there are no images on the USB flash drive.

NOTE 2: On-screen menus will not display while the Media Player is being used.

NOTE 3: MP3 is the MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

NOTE 4: The maximum thickness of the USB flash drive should not exceed 9mm.

Photo Multi-View

This view mode allows all the images within a selected folder to be viewed simultaneously, using thumbnail views in a grid. The initial highlighted position will be the top left image within the grid.

- 1 Open **Media Player**. Press **▲**, **▼**, **◀**, or **▶** to select a folder then press **OK**. All the images in the folder will appear in the Multi View grid.



- 2 Press **▲**, **▼**, **◀**, or **▶** to move through the images. If there are too many images for the screen, pressing **◀** on the top left image will show the previous page moving the highlight to the bottom right image. Alternatively, pressing **▶** on the bottom right image will show the next page moving the highlight to the top left image.

If there is more than one page of images within the folder pressing **P ▲** and **P ▼** will move through the pages.

- 3 Press **RETURN** to leave the current folder. Press **EXIT** to return to the last viewed source.

- **Menu:** Enter menu option. The options are: **Sort**, **Media Type**, and **Thumbnail Size**.
- **Size:** Decides to show the Multi View by **Small**, **Middle**, or **Large** thumbnail size.
- **Sort:** Decides to sort the photo files by **File Date** or **Name**.
- **Browser/Menu:** Decides to browse photos by thumbnail or list mode.

Playing Photo Slideshow

This view mode displays all the images in a selected folder as a slideshow, scrolling through them automatically.

- 1 In the Multi View grid, press ▲, ▼, ◀, or ▶ to highlight an image. Press OK. Slideshow will now display all the images in the selected folder.
 - 2 Pressing P ^ and P v will display next or previous images. The images can also be rotated and their information displayed.
 - 3 Press **EXIT** to return to the last viewed source.
- **Menu:** Select the playing method. The options are: **Pause, Repeat, Shuffle, Duration, Effect,** and **Show Info.**
 - **Duration/Rotate:** While in play mode, press to select the duration to play next one. The options are: **Short, Medium,** and **Long.** While in pause mode, press to rotate the still photo.
 - **Effect:** While in play mode, press to select the playing effect. The options are: **None, Dissolve, Wipe right, Wipe left, Wipe up,** and **Wipe down.**
 - **Pause/Play:** Press to pause while in play mode. Press to play while in pause mode.

Viewing Music Files

This view mode allows all the music files within a selected folder to be viewed simultaneously, using thumbnail views in a grid. The initial highlighted position will be the top left image within the grid.

- 1 Open **Media Player**. Press ▼ to highlight **Music**.



- 2 In **Media Player**, press ▲, ▼, ◀, or ▶ to select a folder then press OK. All the music files in the folder will appear in the Multi View grid.



- 3 Press ▲, ▼, ◀, or ▶ to move through the music files. If there are too many music files for the screen, pressing ◀ on the top left file will show the previous page moving the highlight to the bottom right file. Alternatively, pressing ▶ on the bottom right file will show the next page moving the highlight to the top left file.
- If there is more than one page of images within the folder pressing P ^ and P v will move through the pages.
- 4 Press **RETURN** to leave the current folder. Press **EXIT** to return to the last viewed source.
- **Menu:** Enter menu option. The options are: **Sort, Media Type,** and **Thumbnail Size.**
 - **Size:** Decides to show the thumbnail size by Small, Middle, or Large.
 - **Sort:** Decides to sort the music files by **Name, Genre, Artist,** or **Album.**
 - **Browser/Menu:** Decides to browse music files by thumbnail or list mode.

Playing Music

The Music feature plays MP3 files stored on a USB storage device.

- 1 In the Multi View grid, press ▲, ▼, ◀, or ▶ to highlight a music file. Press OK to start playing all the music files in the selected folder.
- 2 Press OK to pause, press it again to play. Press **EXIT** to return to the last viewed source

NOTE 1: While playing the music files, you may select the playing methods among **Repeat, Shuffle, Audio Only,** or display the music file **Info.**


NOTE 2: MP3 is the MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson

Preference control


Analogue Subtitle

You can set the subtitle on or off while watching TV.

- 1 Highlight **Subtitle** in the **PREFERENCES** menu, and press ► or Ⓚ to enter.

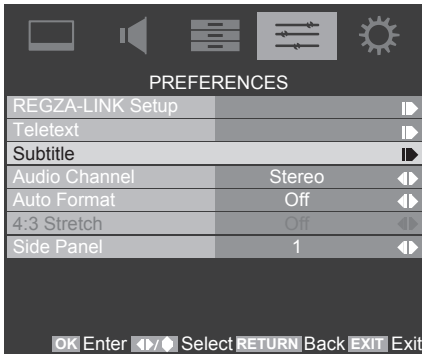

- 2 Press ▲ or ▼ to select the **Analogue Subtitle** and press ◀ or ▶ to select **On**, **Mute**, or **Off**.

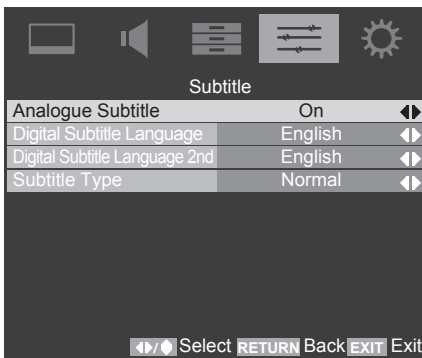

NOTE: When **Analogue Subtitle** is selected to **"Mute"**, the analogue subtitle will be displayed on the screen but the speaker muted simultaneously.

Digital Subtitle

Use the **Digital Subtitle** function when two or more subtitle languages are broadcasted. If subtitle data in a selected language is not broadcasted, the default language subtitle will be displayed.

- 1 Highlight **Subtitle** in the **PREFERENCES** menu, and press ► or Ⓚ to enter.
- 2 Press ▲ or ▼ to select the **Digital Subtitle Language** or **Digital Subtitle Language 2nd** and press ◀ or ▶ to select the language.

NOTE: If the language in the **Digital Subtitle Language** is not available, the **Digital Subtitle Language 2nd** will be displayed.

Subtitle Type

You can choose the **Subtitle Type** from **Normal** or **Hearing Impaired**. If the **"Hearing Impaired"** is selected, it provides subtitle services to deaf and hard of hearing viewers with additional descriptions.

- 1 Highlight **Subtitle** in the **PREFERENCES** menu, and press ► or Ⓚ to enter.
- 2 Press ▲ or ▼ to select the **Subtitle Type** and press ◀ or ▶ to select **Normal** or **Hearing Impaired**.

Audio Languages

This feature allows a programme or film to be viewed with a choice of soundtrack language, provided they are currently being broadcast.

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Audio Language** or **Audio Language 2nd**.

- 2 Press ◀ or ▶ to select an option.

NOTE: The option **V.O.** is only available when the **Country** in the **SETUP** menu is set to **France**.

Audio Channel

If stereo or dual language broadcasts are transmitted, the word **Stereo** or **Dual** will appear on the screen each time the programme positions are changed, and then disappear after a few seconds. If the broadcast is not in stereo, the word **Mono** will appear.

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Audio Channel**.
- 2 Press ◀ or ▶ to select **Stereo**, **Dual1**, **Dual2**, or **Mono**.

Auto Format

When the television receives a true Widescreen picture and **Auto Format** is **On**, it will automatically be displayed in Widescreen format, irrespective of the television's previous setting

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Auto Format**.
- 2 Press ◀ or ▶ to select **On** or **Off**.

4:3 Stretch

If the 4:3 stretch is **On**, the picture size will auto stretch to a Widescreen format.

Highlight **4:3 Stretch** in the **PREFERENCES** menu, and press ◀ or ▶ to select **On** or **Off**.

NOTE: **4:3 Stretch** is only activated when **Auto Format** is set to **On**.

Side Panel Adjustment

The Side Panel feature lightens or darkens the band each side of the screen when in 4:3 or 14:9 format. This helps prevent image retention of the band and can also make viewing in bright or dark conditions more comfortable.

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Side Panel**.
- 2 Press ◀ or ▶ to select **1**, **2**, or **3**.

NOTE: This function is not available in DTV mode.

Game Mode

The Game Mode helps to speed up video response for game application.

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Game Mode**.
- 2 Press ◀ or ▶ to select **On** or **Off**.

NOTE: The **Game Mode** feature is not available in DTV/ATV source input.

Parental control

This function blocks channels or programmes that you do not want to or that you do not want your children to watch.


A password is required to access this function. The factory default password is "0000".

NOTE: When **Channel Block**, **Programme Block** and **Input Block** are activated, you will need to enter the 4-digit password before you enter the **Channels** submenu under the **SETUP**. After auto scan, all the channel blocks will be cleared.


Channel Block

This function blocks channels that you do not want to or that you do not want your children to watch.


- 1 Highlight **Parental** in the **SETUP** menu, and press ▶ or Ⓚ to enter.

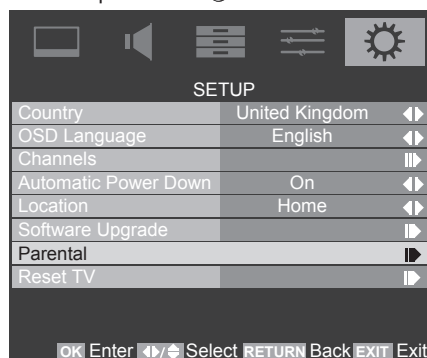


- 2 Enter the 4-digit password.

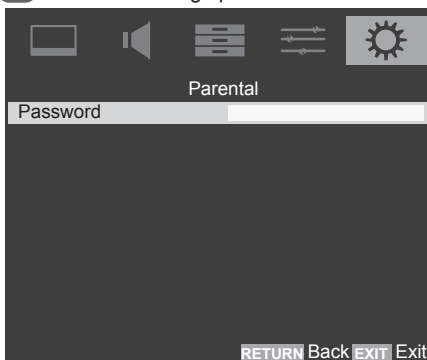

- 3 Press ▼ to highlight the **Channel Block** and press ► or ⓧ to enter.

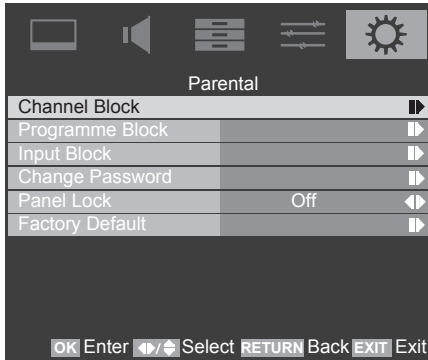


- 4 Press ▼ to highlight the channels you want to block, then press ⓧ to set.

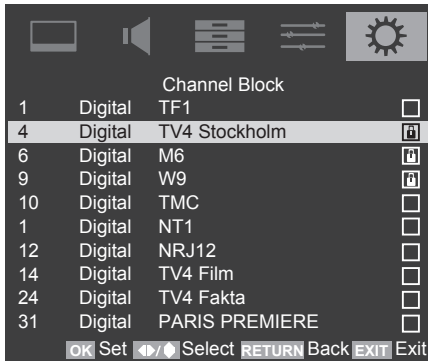


Time Interval Lock

This function blocks channels that you do not want to or that you do not want your children to watch between a preset time interval.


- 1 Highlight **Parental** in the **SETUP** menu, and press ► or ⓧ to enter.

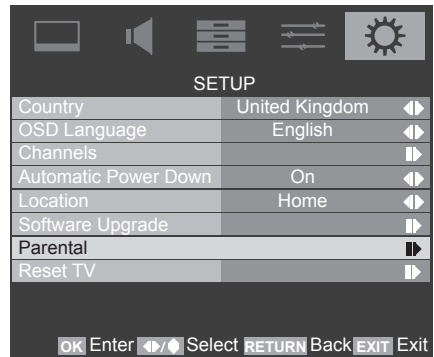



- 2 Enter the 4-digit password.

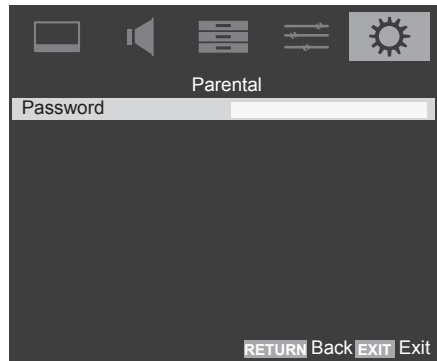

- 3 Press ▼ to highlight the **Time Interval Lock** and press ► or ⓧ to enter.

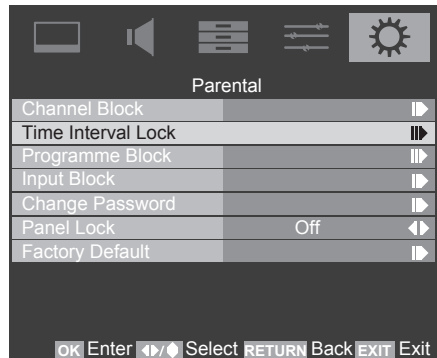

- 4 Press ▼ to highlight **Lock Type**, press ◀ or ▶ to select the day, and then use the digit keys to input the time interval you want to block.

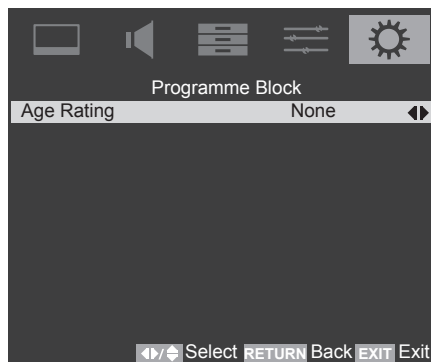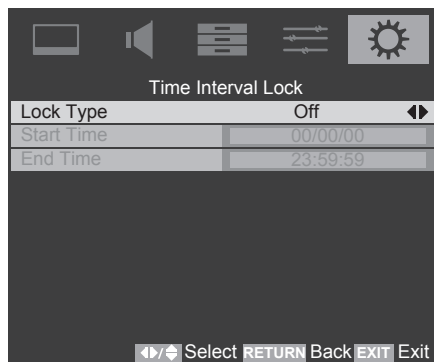


Programme Block

This function prevents children from watching certain TV programmes, according to the rating limit set.

This function operates according to information from the broadcasting station. Therefore if the signal has no information, this function does not operate.

- 1 Highlight the **Parental** in the **SETUP** menu, and press ► or OK to enter.
- 2 Enter the 4-digit password.
- 3 Press ▼ to highlight the **Programme Block** and press ► or OK to enter.

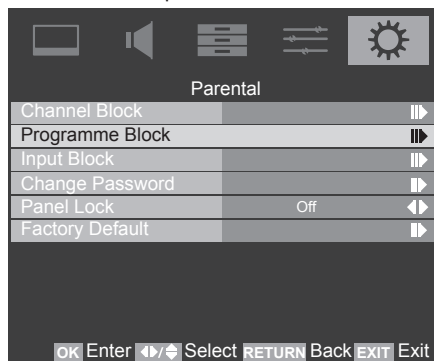


- 4 Press ◀ or ▶ to set the **Age Rating** from age 4~18 or select **None** to turn this function off.

NOTE: This function is available for the programme with Age Rating information.




Input Block

This function can disable the specific external input signals.

- 1 Highlight **Parental** in the **SETUP** menu, and press ► or OK to enter.
- 2 Enter the 4-digit password.
- 3 Press ▼ to highlight the **Input Block** and press ► or OK to enter.

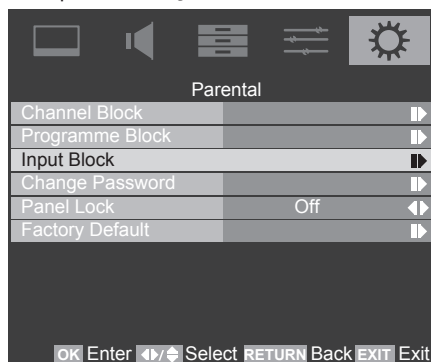


- 4 Press ▲ or ▼ to highlight the input that you want to disable and press OK to lock.

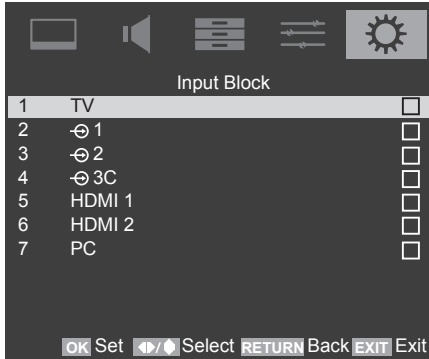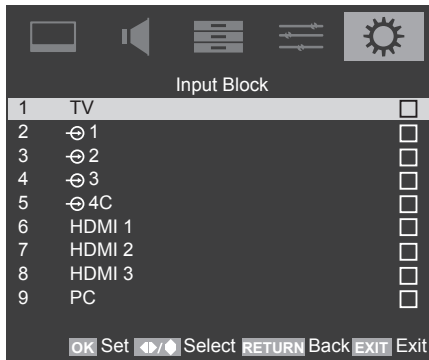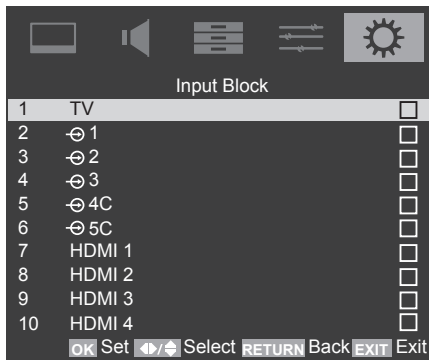
19/22SL738G:**26/32SL738G:****42SL738G:****Change Password**

Change the 4-digit parental control password. The default password is 0000.

- 1** Highlight **Parental** in the **SETUP** menu, and press ► or OK to enter.
- 2** Enter the 4-digit password.
- 3** Press ▲ or ▼ to highlight the **Change Password** and press ► or OK to enter.

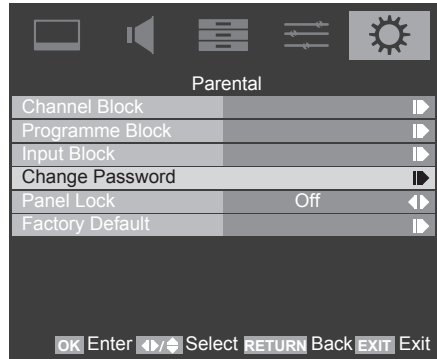


- 4** Enter the 4-digit new password, and re-enter the new password again to confirm.

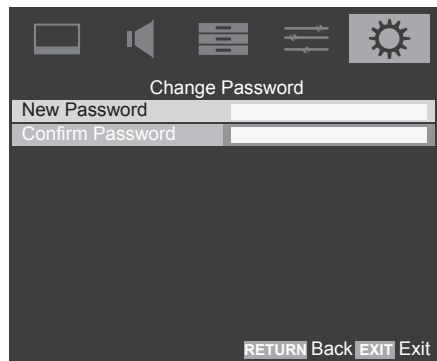

Panel Lock

You can lock the control buttons on your TV by using this **Panel Lock**. When this function enables, the TV can be controlled only by the remote control.

- 1 Highlight **Parental** in the **SETUP** menu, and press ► or OK to enter.
- 2 Enter the 4-digit password.
- 3 Press ▼ to highlight the **Panel Lock** and press ◀ or ► to switch the function **On** or **Off**.

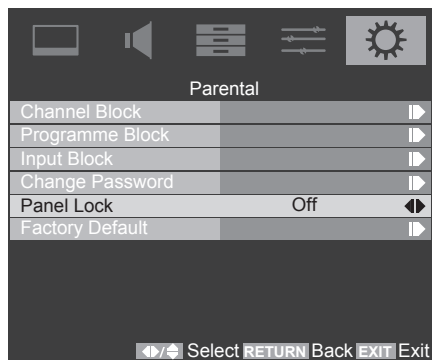


NOTE: When the **Panel Lock** is set to “On”, TV can be turned off by pressing the power keys on the TV or the remote control, but can be turned on only by the remote control.

Factory Default

Selecting **Factory Default** will reset all TV settings, including stored channels, to their original factory values.

- 1 Highlight **Parental** in the **SETUP** menu, and press ► or OK to enter.
- 2 Enter the 4-digit password.
- 3 Press ▼ to highlight the **Factory Default** and press ► or OK to select.

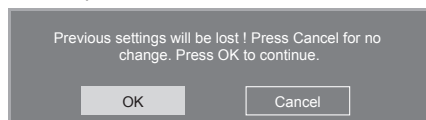


Digital on-screen information and programme guide

The on-screen information and programme guide give access to programme details for all available channels.

Information

- 1 Press **i+**, the information screen will appear giving details of the programme and event currently being viewed.

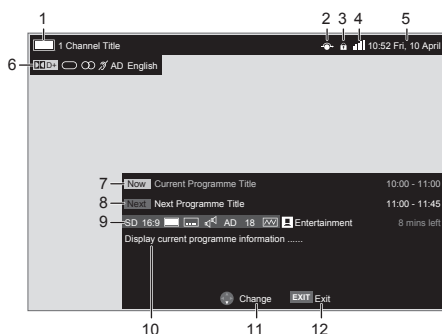

1	Service type
2	Skip
3	Channel block
4	Signal strength
5	Current time and date
6	Audio information
7	Current programme and time
8	Next programme and time
9	Event information
10	Current programme information
11	Change between Now and Next programme list
12	Exit the information screen

- 2 Press **i+** again to close the information screen.

Guide

- 1 Select the on-screen guide by pressing **GUIDE**, the guide screen will appear highlighting details of the programme and event currently being viewed. This may take a few moments to appear.
- 2 Press ◀ or ▶ for information on other events scheduled for the programme selected.
- 3 For details of other programmes currently available, press ▲ and ▼ to scroll up and down the programme list.

NOTE: For the recording operation to work properly, the media recorder must be set to the same time as the TV. Regarding the process for recording, please refer to the owner's manual of the recording equipment.

EPG Timer

EPG (Electronic Programme Guide) supports 8 sets of timers. You can set or cancel a timer for a selected programme within the guide. When the TV is on and the timer activates, a dialogue box is shown informing you that the programme is about to start. When the TV is in standby mode and the timer activates, the TV will wake up with backlight off, speaker mute on, and change to the channel selected.

You must set the time correctly before using this function. All set timers are cleared when performing a new channel scan.

- 1 Press **OK** button to set/unset Timer in the selected programme.
- 2 An indicator will be shown in the detail information area when a timer function is set..
- 3 Press **BLUE** button to enter the programme timer list page.

NOTE: Time can be set manually in the Menu/Timer/Time OSD menu.


After adjustment, the TV clock may not match the time in the EPG Programme Guide. The EPG Programme Guide time follows the broadcast stream time which can not be adjusted.

Software upgrade and system information

Auto Download

This feature enables your TV to download new software automatically upon broadcasting.


- 1 In the **SETUP** menu, press ▼ to highlight **Software Upgrade** and press ▶ or **OK** to enter.
- 2 Press ▼ to highlight **Auto Download**.
- 3 Press ◀ or ▶ to select **On** or **Off**.

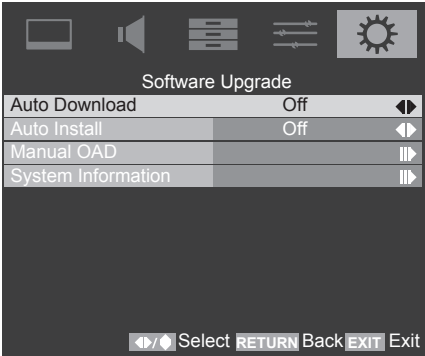

Auto Install

This feature enables your TV to install new software automatically.


- 1 In the **SETUP** menu, press ▼ to highlight **Software Upgrade** and press ► or OK to enter.
- 2 Press ▼ to highlight **Auto Install**.
- 3 Press ◀ or ▶ to select **On** or **Off**.

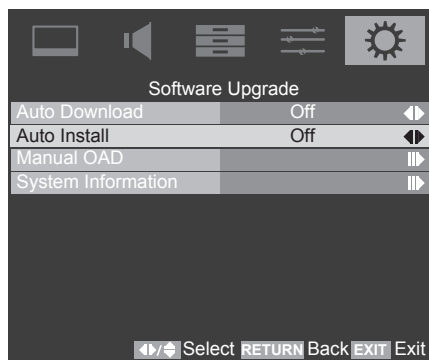


Manual OAD

This feature enables upgrading your TV software by air manually.

- 1 In the **SETUP** menu, press ▼ to highlight **Software Upgrade** and press ► or OK to enter.
- 2 Press ▼ to highlight **Manual OAD** and press ► or OK to enter.

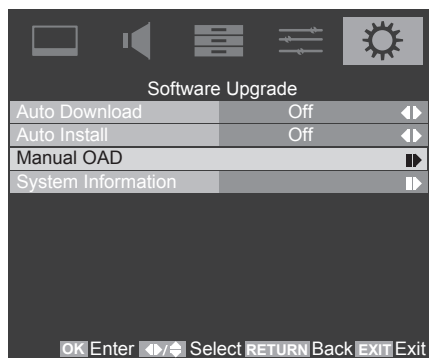


- 3 The **Over-Air Download** screen appears. Follow the on-screen instruction to complete the software upgrade.

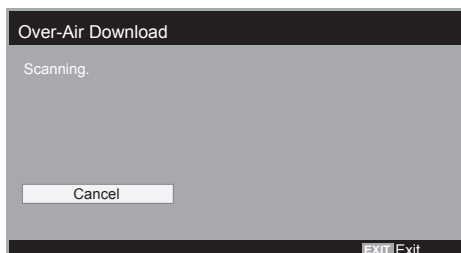


System Information

This feature can be used to check the version of software currently installed.

- 1 In the **SETUP** menu, press ▼ to highlight **Software Upgrade** and press ► or OK to enter.
- 2 Press ▼ to highlight **System Information**.

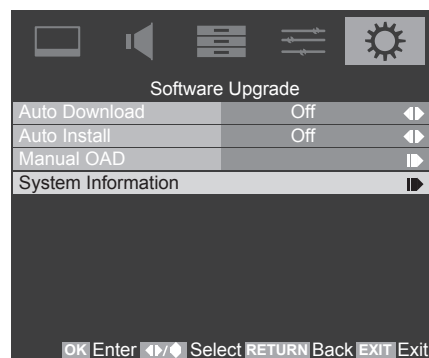

- 3 Press ► or OK to display the system information.

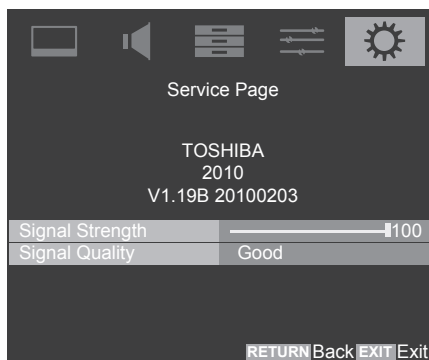

NOTE: In DTV mode, this service page includes additional diagnostic information, such as signal strength, signal quality, center frequency, modulation, etc.


Text services

This television has a multi-page text memory, which takes a few moments to load.


Setting the Language

You can set the teletext language.

- 1 In the **PREFERENCES** menu, press ▼ to highlight **Teletext**, then press ► or OK to confirm.

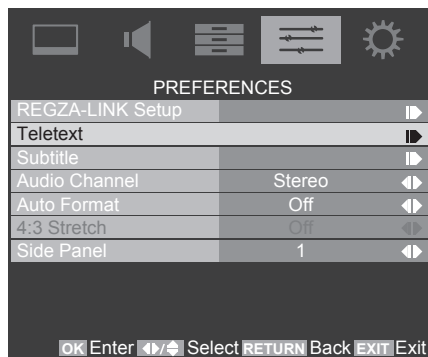

- 2 Press ▲ and ▼ to select the options, and then press ◀ and ▶ to select the language.

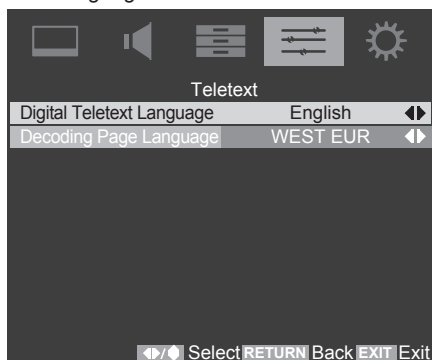

Text Information

The first text page shown will be the index page.

Any text page can be accessed by entering the 3-digit page number using the numbered buttons, pressing the coloured buttons or pressing P ^ to advance to the next page and P v to go back to the previous page.

Control Buttons

Below is a guide to the functions of the remote control text buttons.

To display the index/initial page:

Press to access the index/initial page. The one displayed is dependant on the broadcaster.

To reveal concealed text:

To discover the solutions on quiz and joke pages press the button.

To hold a wanted page:

At times it is convenient to hold a page of text. Press and will appear in the top of the screen. The page will be held on screen until the button is pressed again.

To enlarge the text display size:

Press once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.

To toggle between Teletext and normal picture mode:

Enter the page number then press , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen.

Sub page will be automatically displayed.

Questions and Answers

Below are the answers to some of the most common queries.

Q *Why is there no sound or picture?*

A Check the television is not in standby mode. Check the mains plug and all mains connections.

Q *Why is there incorrect or no sound when in DTV mode?*

A Press /II to ensure the hard of hearing option has not been selected.

Q *Why doesn't the video/DVD being played show on screen?*

A Make sure the Media Recorder or DVD player is connected to the television as shown on page 8, then select the correct input by pressing .

Q *Why is there a good video picture but no sound?*

A Check all lead connections.

Q *Why is there a picture but no sound?*

A Check the volume has not been turned down or that sound mute has not been selected.

Q *Why is the Media Recorder/DVD picture in black and white?*

A Check the correct input has been chosen, **S-VIDEO** or **AV**. See **AV connections** on page 38.

Q *What else can cause a poor picture?*

A Interference or a weak signal. Try a different television station. **Analogue Manual Scan** may help.

Q *Why doesn't the remote control work?*

A Check the batteries aren't dead or inserted incorrectly.

Q *Why is there a message permanently on the screen?*

A Remove it by pressing .

Q *Why are there problems with analogue text?*

A Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the text is unreadable or garbled, check the aerial. Go to the main index page of the text service and look for the User Guide. This will explain the basic operation of text in some detail.

Q *Why are the four coloured text numbers visible but no text?*

A Text has been selected while viewing an external source i.e. DVD or Media Recorder. No text will appear on screen or a box may appear stating no information is available. Select a broadcasting channel and press to access.

Q *Why don't the devices connected via HDMI operate properly?*

A Make sure to use cables with the HDMI logo **HDMI** (see page 13). Some early HDMI equipment may not work properly with the latest HDMI TV products, due to new standard adoption.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Q *Why when digital subtitles have been selected are they not showing on screen?*

A Subtitles are not currently being transmitted by the broadcaster.

Q *Why is there no digital text service?*

A The **digital** programme being viewed is not broadcasting digital text. Try another **digital** programme.

Q *What can be done if the user-defined password has been forgotten?*

A Use the universal password 1276, then change to a new number of your choice.

Q *Why does the TV turn off by itself?*

A After roughly 15 minutes without any input video signal at TV mode, the TV will turn off to save power.

Q *Does this TV support the DPMS?*

A This set is equipped with a function for saving energy which supports the VESA Display Power Management Signaling (DPMS) standard. This means that the monitor must be connected to a computer which supports VESA DPMS. To exit DPMS mode, press  button on the remote control to wake up the TV.

Q *Why does some on-screen information appear as strange symbols?*

A Please make sure your "Country" setting is correct.

Q *Why don't the REGZA-LINK devices work?*

A When the connected REGZA-LINK device does not work correctly after you have changed the settings of the device, turn off your television and unplug the power cord, and then plug and turn on again. Unplug the HDMI cable of the REGZA-LINK device and lead again.

Q *Why is the REGZA-LINK logo still showing when the equipment has been disconnected?*

A If the REGZA-LINK device is disconnected, the logo will disappear after approximately one minute.

Specifications and accessories

- This television complies with the specification listed below.
- Design and specifications are subject to change without notice.

DVB-T Broadcast systems/ channels		Broadcast systems/channels	
UK	UHF 21-68	PAL-I	UHF UK21-UK69
France	VHF 05-10 (VHF 01-05) UHF 21-69	PAL-B/G	UHF E21-E69 VHF E2-E12, S1-S41
Germany	VHF 05-12 UHF 21-69	SECAM-L	UHF F21-F69 VHF F1-F10, B-Q
Austria	VHF 05-12 UHF 21-69	SECAM-D/K	UHF R21-R69 VHF R1-R12
Switzerland	VHF 05-12 UHF 21-69		
Italy	VHF 05-12 (D,E,F,G,H,H1,H2) UHF 21-69		
Spain	UHF 21-69		
Netherlands	VHF 05-12 UHF 21-69		
Sweden	VHF 05-12 UHF 21-69		
Finland	VHF 05-12 UHF 21-69		
Greece	VHF 05-12 UHF 21-69		
Video Input	PAL, SECAM, NTSC 3.58/4.43		

External connections

Antenna	Input		75 Ohm
Component	Input	Phono jacks	Y, P _B /C _B , P _R /C _R
		Phono jacks	Audio L + R
Composite	Input	Phono jack	Video
		Phono jacks	Audio L + R
SCART	Input/Output	21-pin SCART	Auto, Mixed, RGB, Composite, S-Video / TV Out
PC	Input	D-sub	RGB
HDMI	Input	HDMI®	
PC/HDMI1 Audio	Input	R3.5mm stereo	Audio L + R
Digital Audio	Output	S/PDIF	Optical
USB Port	Interface version: USB 2.0		
	USB class:	Mass Storage	
	File system:	FAT12, FAT16 and FAT32	
	USB flash drive thickness:	9mm (max.)	
Headphone	Output	R3.5mm stereo	

Stereo	Nicom 2 carrier system		
Visible Screen Size (cm)(diagonal)	Model	19	47.0
		22	54.8
		26	66.1
		32	80.0
		42	106.7
Display			16:9
Sound output (at 10% distortion)	Model	19	3W + 3W
		22	3W + 3W
		26	5W + 5W
		32	10W + 10W
		42	10W + 10W
Power consumption as specified in EN60065:2002	Model	19	40W
		22	46W
		26	60W
		32	73W
		42	145W
Standby (approx.)	Model	19	0.5W
		22	0.5W
		26	0.5W
		32	0.5W
		42	0.5W
Dimensions (H x W x D mm) (approx.) (includes foot stand)	Model	19	342.8 x 469.9 x 188.0
		22	379.3 x 538.1 x 211.3
		26	442.6 x 645.1 x 205.2
		32	518.5 x 775.4 x 208.2
		42	668.5 x 1004.7 x 284.5
Weight (approx.) (includes foot stand)	Model	19	4.0 kg
		22	5.5 kg
		26	7.0 kg
		32	11.5 kg
		42	20.5 kg
Operating condition	Temperature: 5°C ~ 35°C (41°F ~ 94°F) Humidity: 20 ~ 80% (non-condensing)		
Accessories	Remote control 2 batteries (AAA, IEC R03 1.5V) User Manual		

License Information used with Toshiba Televisions

The software pre-installed in the TOSHIBA Digital Televisions consists of multiple, independent software components. Each software component is copyrighted by TOSHIBA or a third party.

The TOSHIBA Digital Televisions uses software components that are distributed as freeware under a third-party end-user license agreement or copyright notice (hereinafter referred to as a "EULA"). Some EULAs require that the source code of the applicable component be disclosed as the condition for distributing the software component in executable format.

You can check the software components subject to such EULA requirements on the following Home Page:

URL : <http://tesc.toshiba.co.uk/Web/Website.nsf/ContentFrameSet?OpenFrameset>

In addition, some of the software components which are used in Toshiba Digital Televisions include the software that are made or developed originally by TOSHIBA. These software and accompanied documents are copyrighted by TOSHIBA, and protected by Copyright Act, an international treaty's articles and other governing laws. The software components which are made or developed originally by TOSHIBA and not subject to EULAs are not a target of source code offering.

The Toshiba warranty provided in respect of the Digital TV is the only warranty provided and no additional warranties are provided in respect of the software components subject to EURAs.

Some of the software components distributed under EULAs are made available for use by the user on the premise that they are not copyrighted or warranted by TOSHIBA or any third party. These software components are licensed to the user free of charge and therefore not covered by any warranty within the scope of the applicable laws. These software components are provided in "as is" condition without any warranty, whether express or implied. "Warranty" here includes, but not limited to, an implied warranty for marketability or fitness for specific uses. All risks associated with the quality or performance of these software components are assumed by the user. TOSHIBA shall not be liable whatsoever for any cost of repair or correction or other incidental expense incurred in connection with a defect found in any of these software components. Unless specified under the applicable laws or in a written agreement, a party who changes or redistributes the software with consent from the copyright holders or based on the aforementioned licenses shall not be held liable whatsoever for any loss arising from the use of or inability to use such software components. The same applies even when the copyright holders or relevant third parties have been informed of the possibility of such loss. "Loss" here includes normal, special, incidental and indirect loss (including, but not limited to, the loss of data or its accuracy; loss incurred by the user or any third party; and interface incompatibility with other software). Please read each EULA for details on the use conditions and items that must be observed regarding these software components.

The table below lists the software components pre-installed in the TOSHIBA Digital Televisions, which are subject to EULAs. The user should read the applicable EULAs carefully before using these software components. The EULAs are exhibited in their original text (English) as exactly written by the respective parties other than TOSHIBA.

Pre-Installed Software	EULA
FreeType	Exhibit A
ICU	Exhibit B

Exhibit A

Portions of this software are copyright © <2007> The FreeType Project (www.freetype.org).

All rights reserved

Exhibit B

ICU License - ICU 1.8.1 and later**COPYRIGHT AND PERMISSION NOTICE**

Copyright © 1995-2006 International Business Machines Corporation and others

All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

ICU License - ICU 1.8.1 and later

COPYRIGHT AND PERMISSION NOTICE

Copyright © 1995-2006 International Business Machines Corporation and others

All rights reserved.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

DVB is a registered trademark of the DVB Project

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Printed on recycled paper. 100% Chlorine free.

© TOSHIBA Television Central Europe Sp. z o.o.

All rights reserved.

Reproduction in whole or part without written permission is strictly prohibited.

TOSHIBA Television Central Europe Sp. z o.o.

ul. Pokoju 1, Biskupice Podgórne, 55-040 Kobierzyce, Poland

Specification is subject to change without notice

Notes

For your own records

Cleaning the screen and cabinet...

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

The following information is only for EU-member states:

Disposal of products The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling center.



The black bar indicates that the product was placed on the market after August 13, 2005.

By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.

Disposal of batteries and/or accumulators.

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.



If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol. By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

Hg Cd Pb

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.